

Spare Part Book



EFM



GEO Italy S.R.L.

Latest release: 16/03/2021

Via G. Abbate, 215, 14054 Castagnole delle Lanze AT

Page 1


Table of Contents

Tavola	Page
EFM	3
EFM 2018 2019	17

EFM



GEO Italy S.R.L.

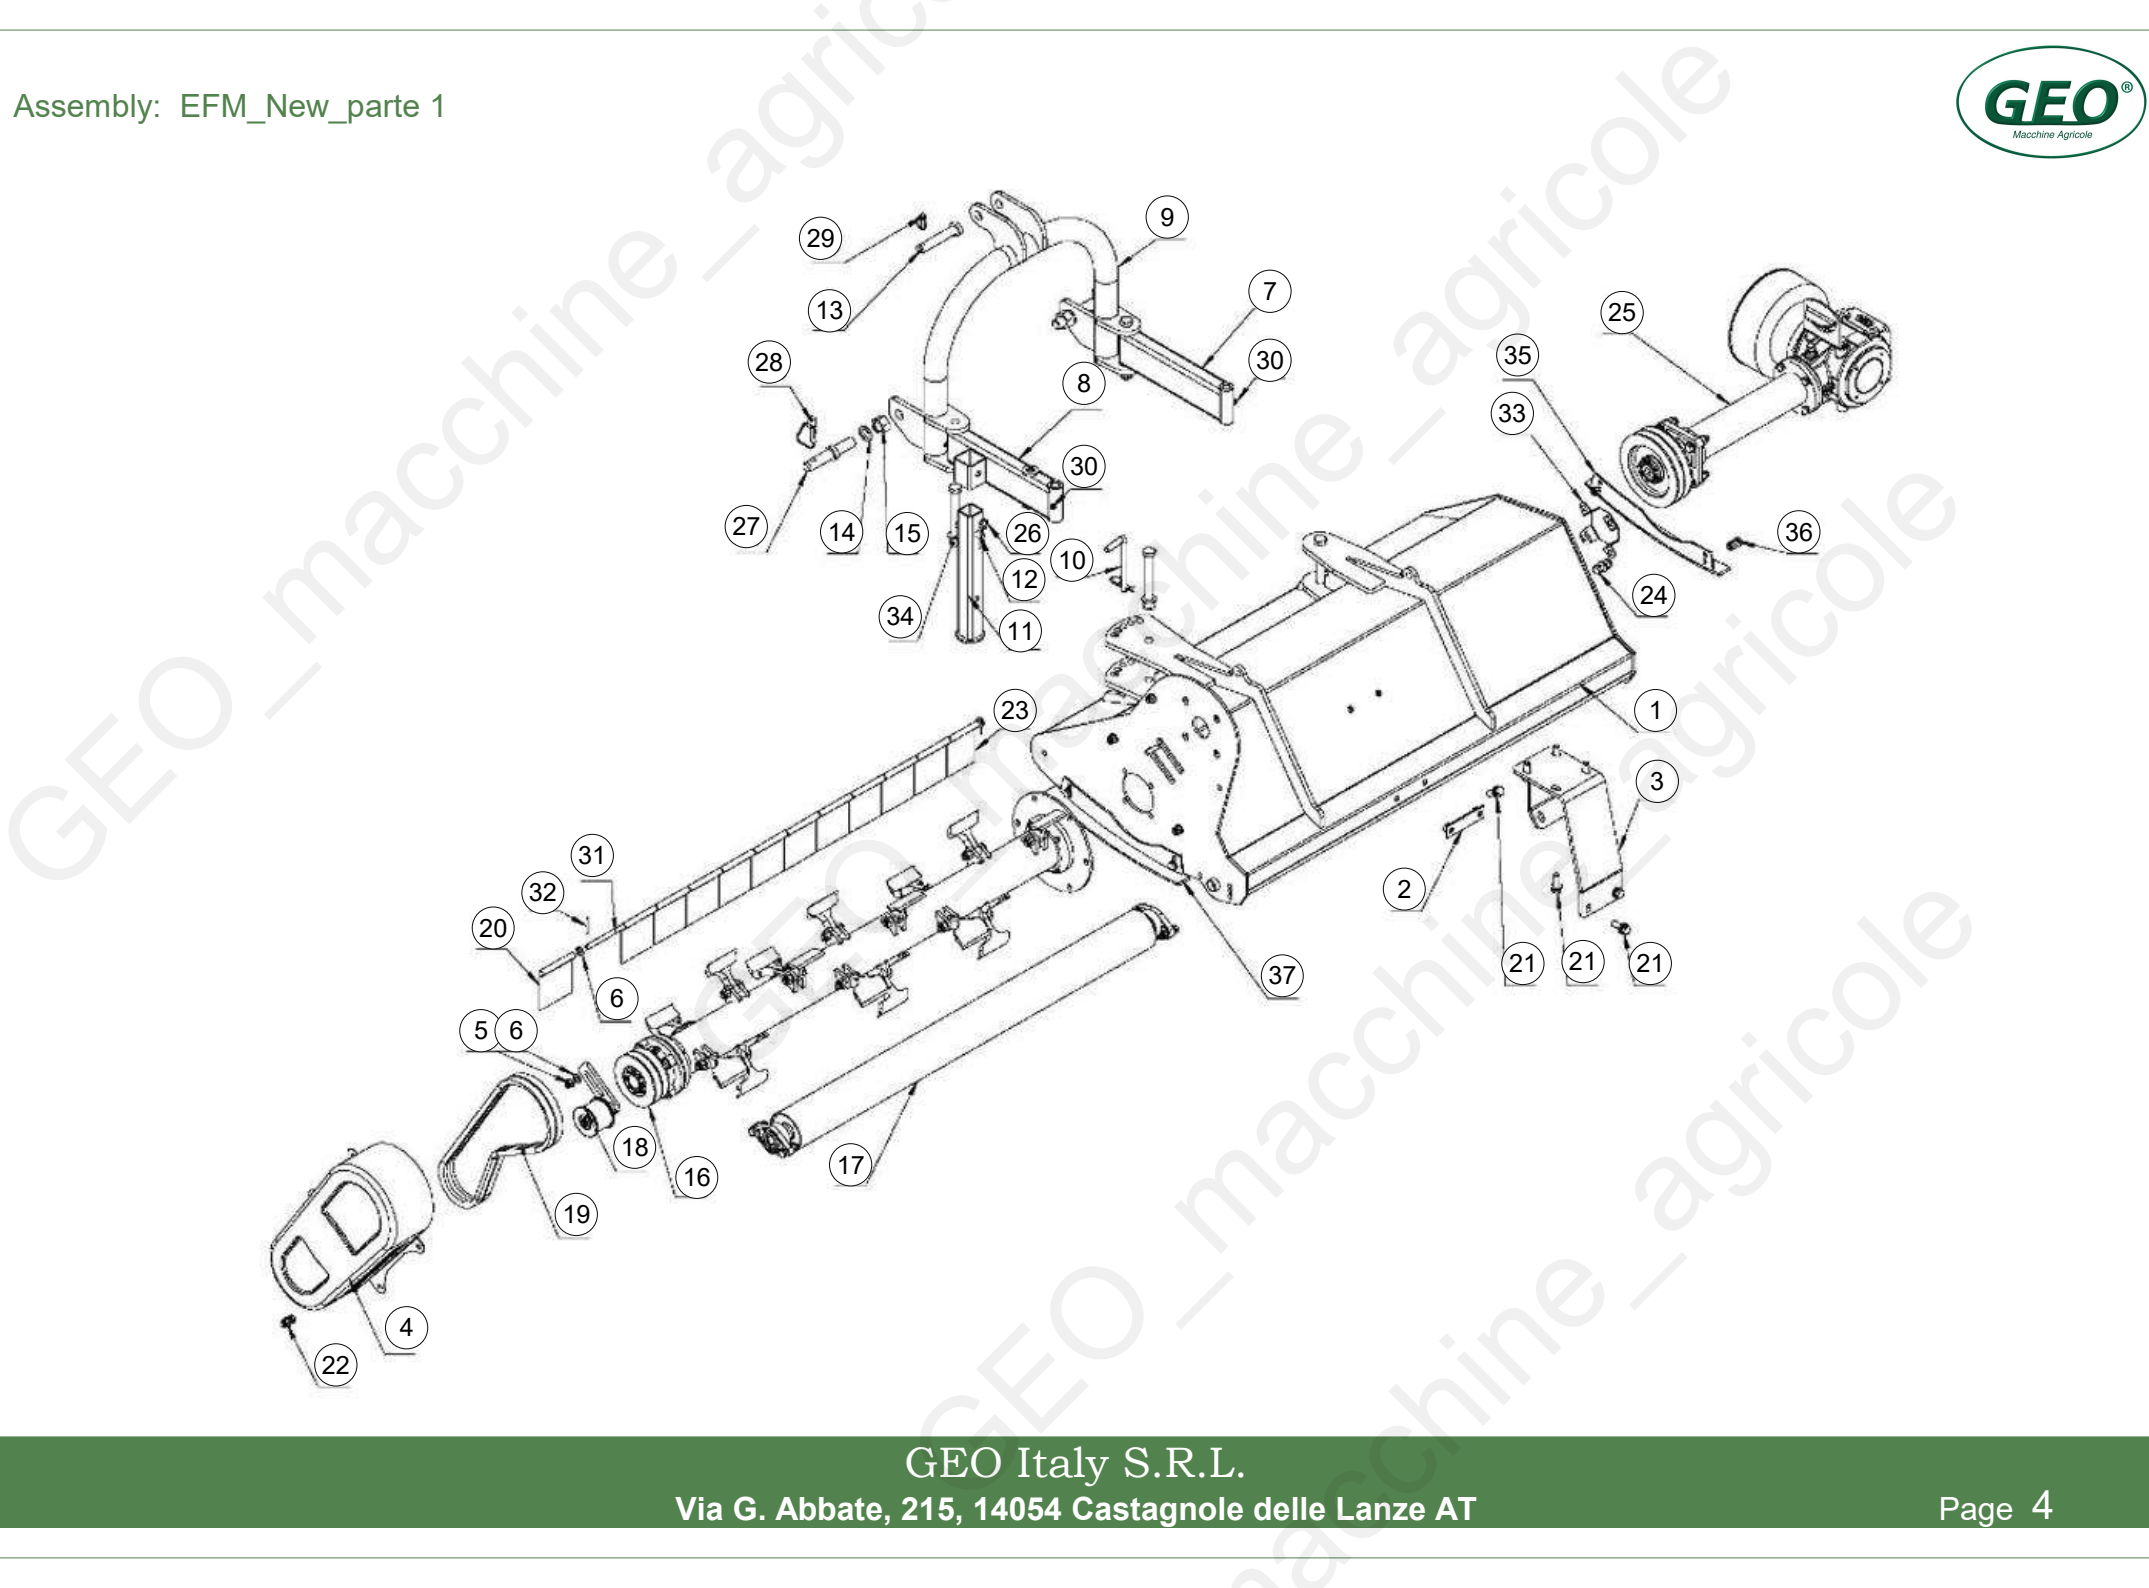


Pos	Code	Description	NOTE	Q.
1	EFM115.012Z	HOOD ASSEMBLY EFM 115		1
1	EFM125.012Z	HOOD ASSEMBLY EFM 125		0
1	EFM145.012Z	HOOD ASSEMBLY EFM 145		0
1	EFM155.012Z	HOOD ASSEMBLY EFM 155		0
2	EFM115.015	CONNECTING PLATE ASSEMBLY		2
3	EFM115.016Z	GEAR BOX BASE ASSEMBLY		1
4	BELT.WHEEL.COVER.AS	BELT WHEEL COVER ASSEMBLY		1
5	GB889.1-M10	Locking nut M10		1
6	GB95-10	Plain washer 10		3
7	EFM115.018	RIGHT ARM ASSEMBLY		1
8	EFM115.019	LEFT ARM ASSEMBLY		1
9	EFM115.017	SUSPENSION FRAME ASSEMBLY		1
10	EFM115.115	7 PIN		1
11	EFM115.021	SUPPORTING LEG ASSEMBLY		1
12	1G135.00.107	Plug Pin		1
13	EFGC125.123	HITCH PIN-TOP		1
14	GB93-22	spring washer 22		2
15	GB6171-M22	FINE NUT M22		2
18	EFM115.005	TENSIONING PLATE ASSEMBLY 2 Grooves	for EFM105-125	1
18	EFM115.005.3	TENSIONING PLATE ASSEMBLY 3 Grooves	for EFM145-155	1
19	GB/1154-17.41-5	BELT B 41 1/2 (1054Li)		2
20	TET105.103	WIDE BAFFLE		11
21	GB5783-M12X35	Bolt M12X35		8
22	GB5783-M10X25	Bolt M10X25		4
23	TET105.104	BAFFLE		1

Machine: EFM

Assembly: EFM_New_parte 1



Pos	Code	Description	NOTE	Q.
24	GB.5783-M12X35	BOLT M12×35 ASSEMBLY		6
26	QC623.3.2	PIN 3.2		2
27	FM150.114	HITCH PIN-LOWER		1
28	LOCK.PIN.10A	LOCK PIN 10A		2
29	LOCK.PIN.8A	LOCK PIN 8A		1
30	GB1152-M8X1	Grease Nipple M8x1		6
31	EFM115.112	BAFFLE HANGER ROD ASSEMBLY EFM 115		1
31	EFM125.112	BAFFLE HANGER ROD ASSEMBLY EFM 125		0
31	EFM145.112	BAFFLE HANGER ROD ASSEMBLY EFM 145		0
31	EFM155.112	BAFFLE HANGER ROD ASSEMBLY EFM 155		0
32	GB91-2.5×36	COTTER PIN 2.5×36		2
33	EFM115.118	BEARING SEAT GUARD PLATE		1
34	GB5782-M16x140	BOLT M16×140 ASSEMBLY		4
35	EFM115.023	RIHGT CHUTE BOARD ASSEMBLY		1
36	GB.5783-M10X25	BOLT M10×25		4
37	EFM115.024	LEFT CHUTE BOARD ASSEMBLY		1

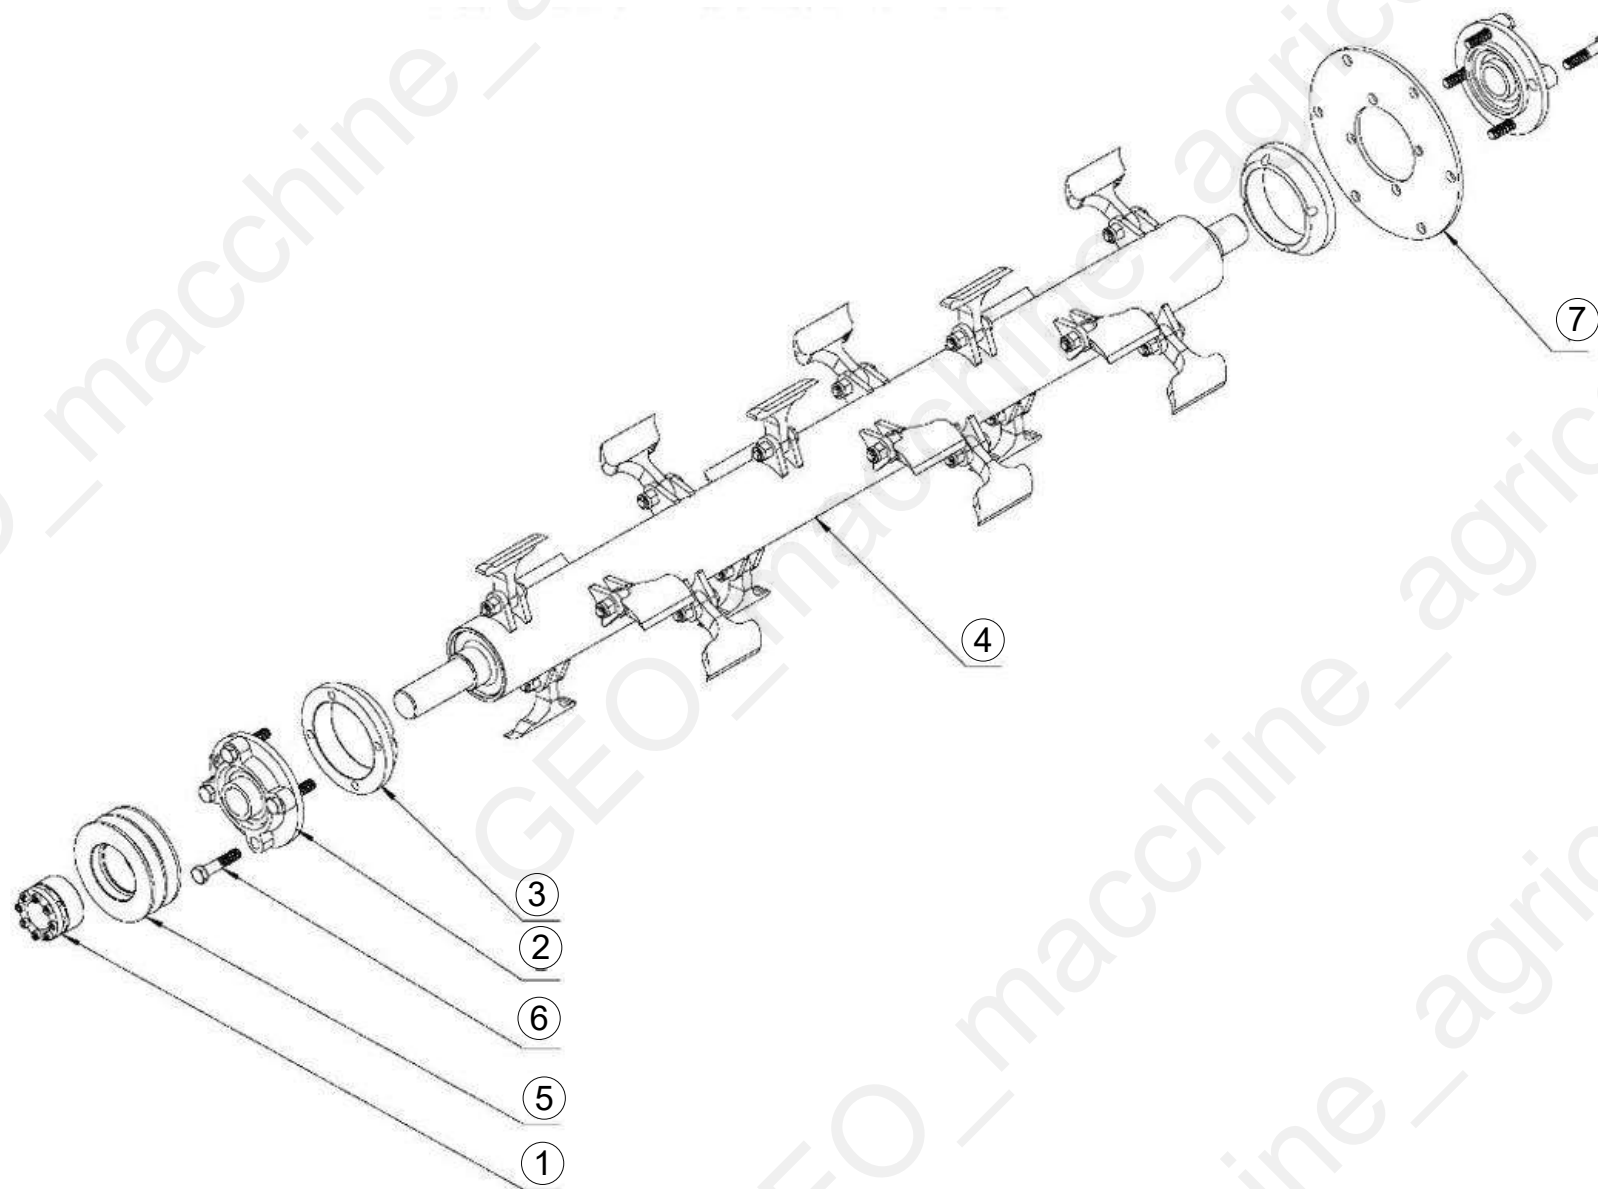


Machine: EFM

Assembly: EFM_New_parte 2



Pos	Code	Description	NOTE	Q.
1	JB/T7934Z3/35X60	Swellable sleeve 35X60		1
2	TY90507-UC207	MOUNTED BALL BEARINGS UC207		2
3	EFM115.102	CUTTER SHAFT FLANGE		2
4	EFM115.003	CUTTER SHAFT ASSEMBLY EFM 115		1
4	EFM125.003	CUTTER SHAFT ASSEMBLY EFM 125		0
4	EFM145.003	CUTTER SHAFT ASSEMBLY EFM 145		0
4	EFM155.003	CUTTER SHAFT ASSEMBLY EFM 155		0
5	EFG120.105.2	small belt pulley 120mm 2 grooves		1
5	EFG120.105.3	small belt pulley 120mm 3 grooves		1
6	GB5780-M12×55	BOLT M12x55		8
7	EFM115.111	SHAFT SLEEVE CONNECTING PLATE		1

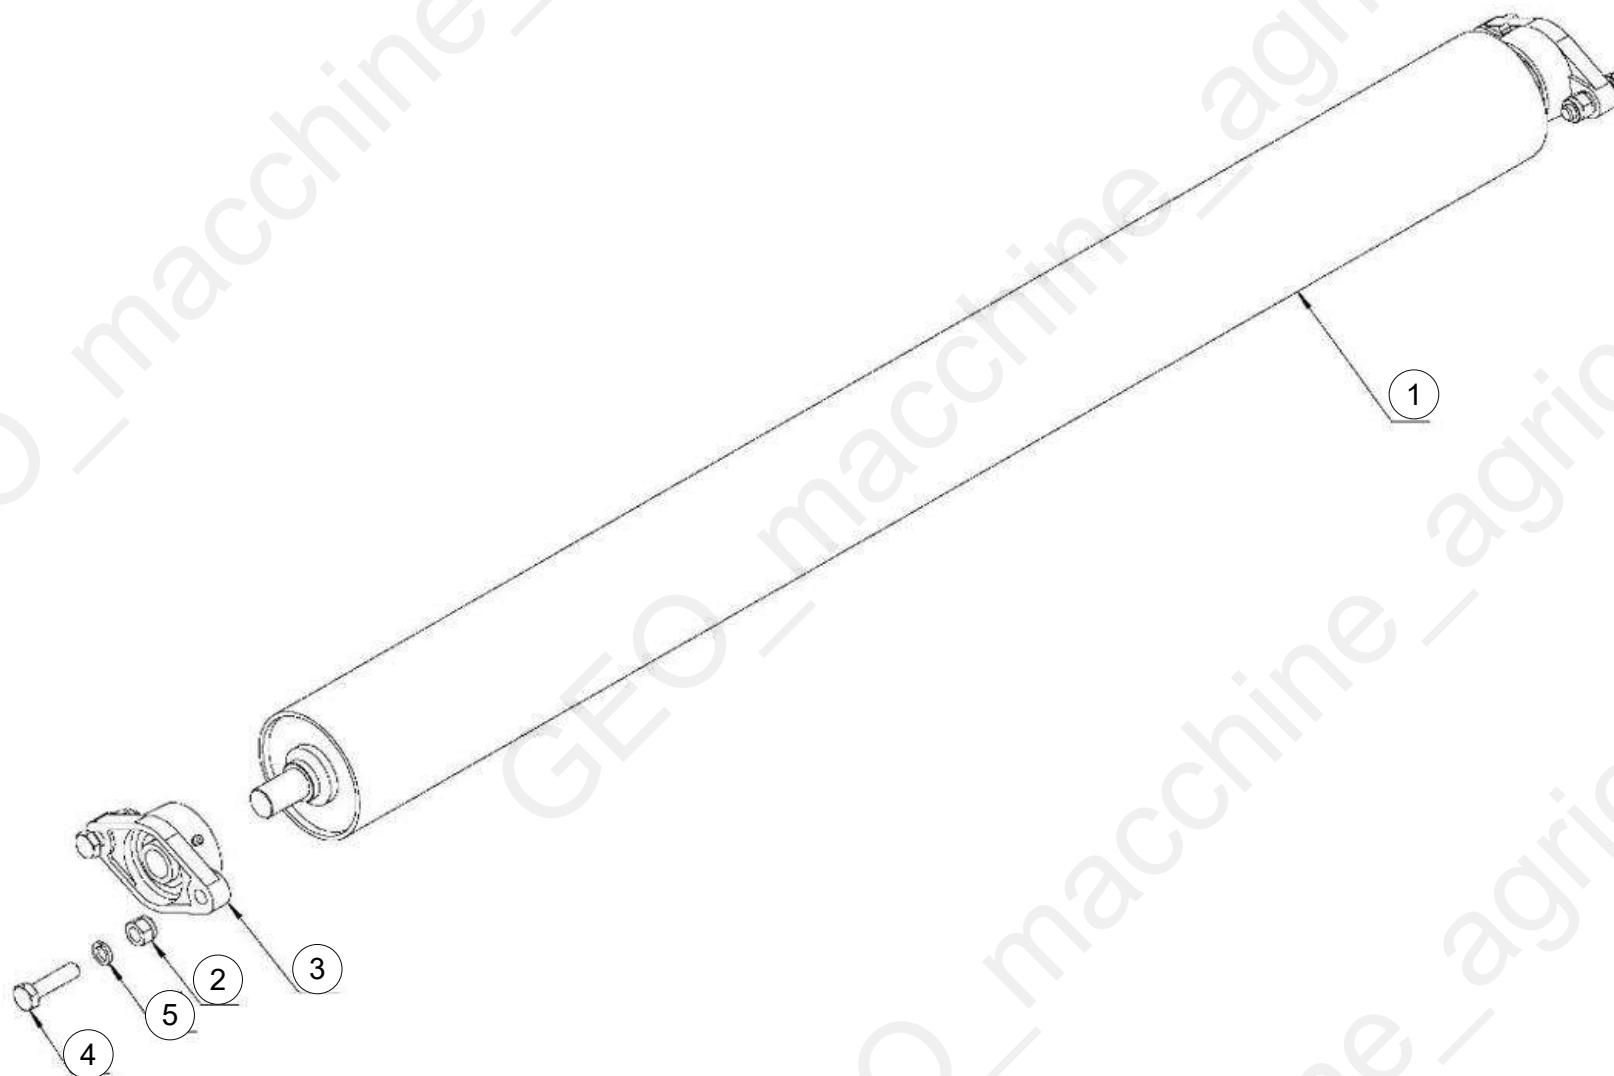


Machine: EFM

Assembly: EFM_New_parte 3



Pos	Code	Description	NOTE	Q.
1	EFM115.014	ROLLER ASSEMBLY EFM 115		1
1	EFM125.014	ROLLER ASSEMBLY EFM 125		0
1	EFM145.014	ROLLER ASSEMBLY EFM 145		0
1	EFM155.014	ROLLER ASSEMBLY EFM 155		0
2	GB889.1-M10	Locking nut M10		4
3	GB.7810-UCFLU204	BEARING WITH DIAMOND SEAT UCFLU204		2
4	GB5781-M10×40	BOLT M10×40		4
5	GB93-10	spring washer 10		4

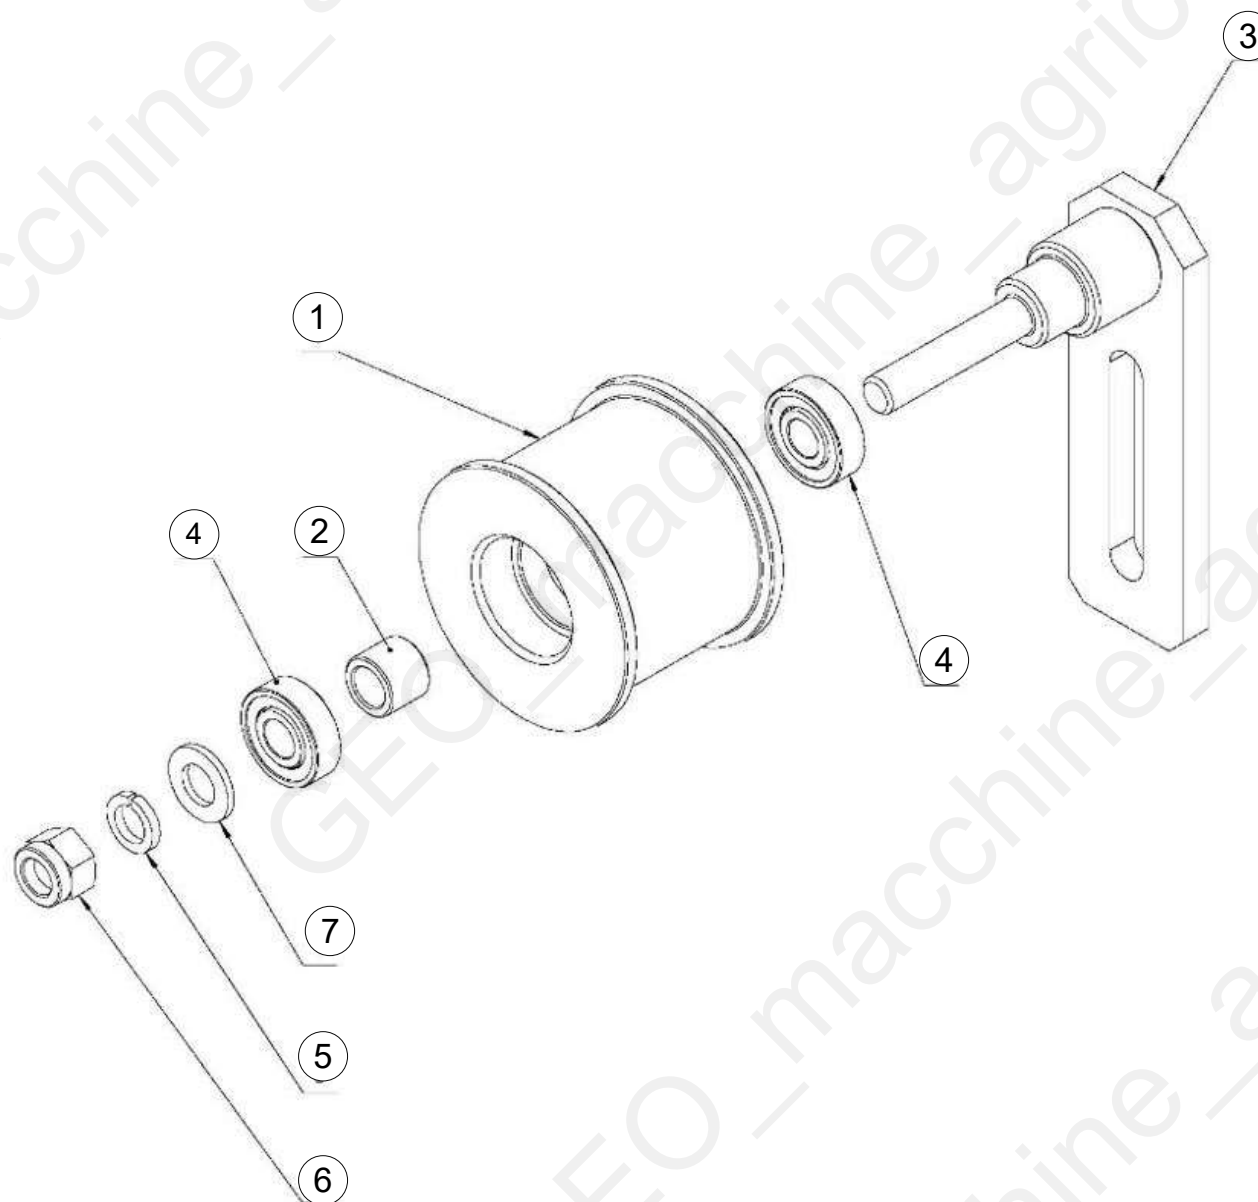


Machine: EFM

Assembly: EFM_New_parte 4



Pos	Code	Description	NOTE	Q.
1	EFM115.106	TENSION PULLEY 2 Grooves		1
1	EFM115.106.3	TENSION PULLEY 3 Grooves		1
2	EFM115.109	TENSION SHAFT SPACER SLEEVE		1
3	EFM115.022	TENSION SHAFT ASSY		1
4	GB276-6000-2Z	BALL BEARING 6202-2RZ		2
5	GB93-10	spring washer 10		1
6	GB.889.1-M10	NUT M10		1
7	GB95-10	Plain washer 10		1

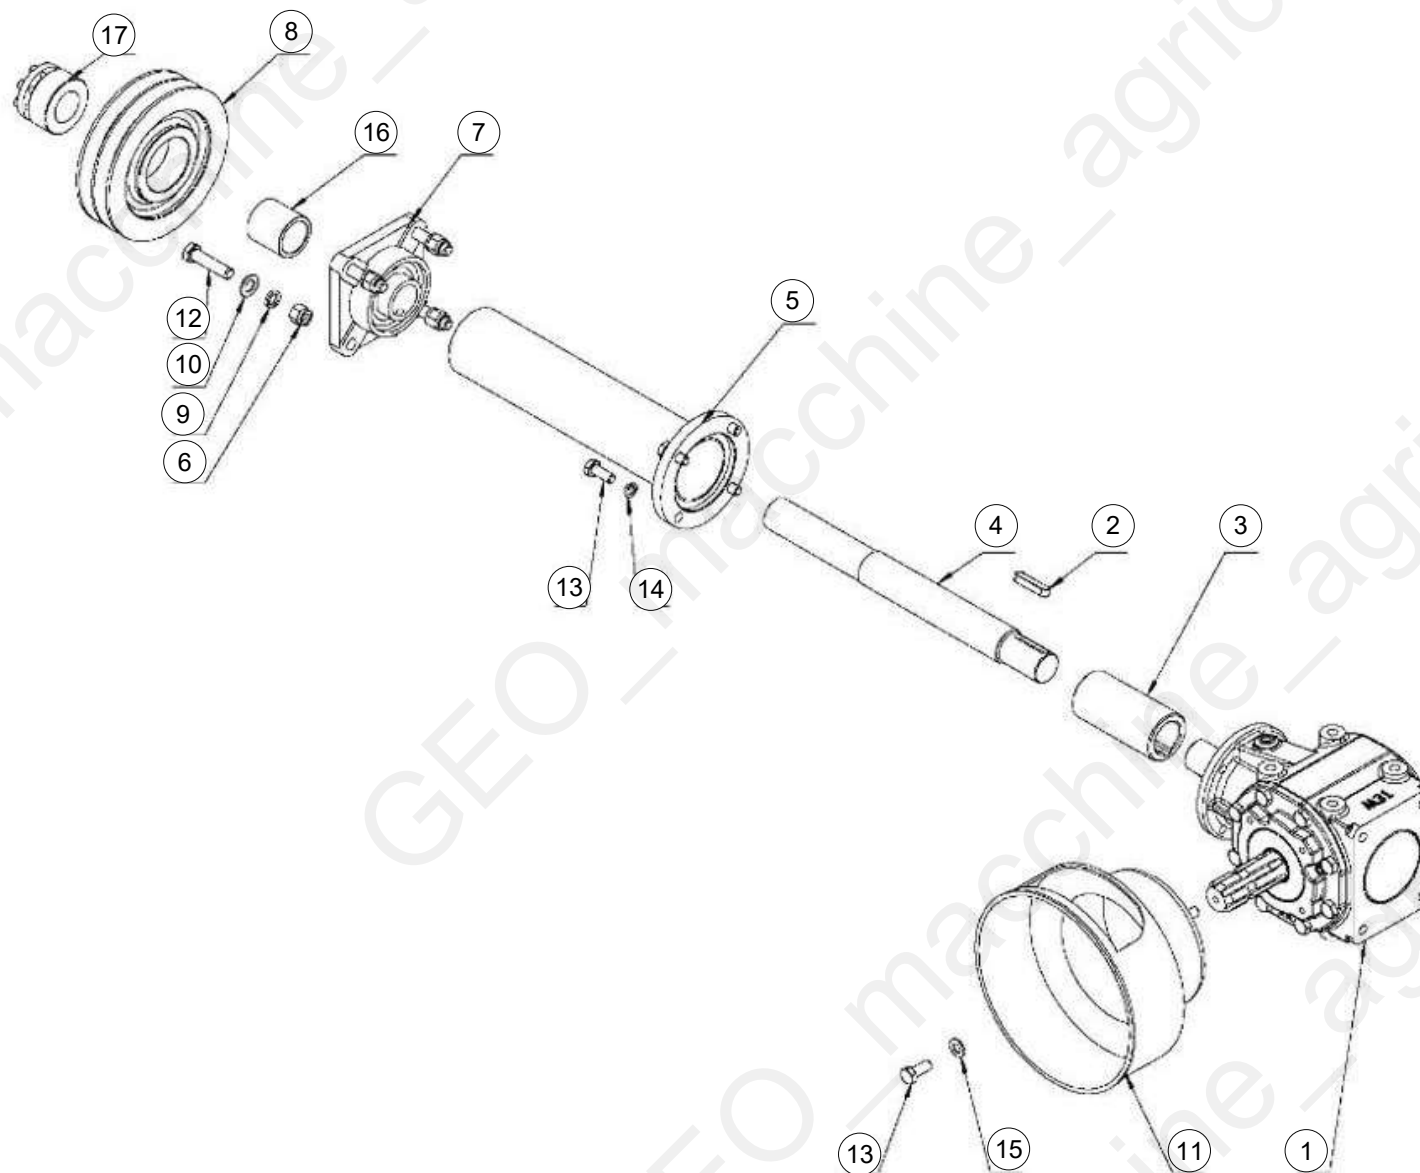


Machine: EFM

Assembly: EFM_New_parte 5



Pos	Code	Description	NOTE	Q.
1	XH30.300Z.02	GEARBOX		1
2	GB1096-10X8.5X45	FLAT KEY 10X8.5X45		2
3	EFM115.114	CONNECTING SLEEVE		1
4	EFM115.103Z	GEARBOX TRANSMISSION SHAFT		1
5	EFM115.013Z	SHAFT SLEEVE ASSEMBLY		1
6	GB889.1-M12	Locking nut M12		4
7	UCF207	BEARING SEAT UCF207 SQUARED		1
8	EFG120.106.2	Big belt pulley 170mm 2 grooves		1
8	EFG120.106.3	Big belt pulley 170mm 3 grooves		1
9	GB.93-12	SPRING WASHER 10		4
10	GB.95-12	WASHER 8		4
11	shaft.cover	TRANSMISSION SHAFT SLEEVE		1
12	GB5781-M12×50	BOLT M12×50		4
13	GB5781-M10×25	BOLT M12X35		8
14	GB93-10	spring washer 10		4
15	GB95-8	Plain washer 8		4
16	EFM115.113	SPACER SLEEVE		1
17	JB/T7934Z3/35X60	Swellable sleeve 35X60		1

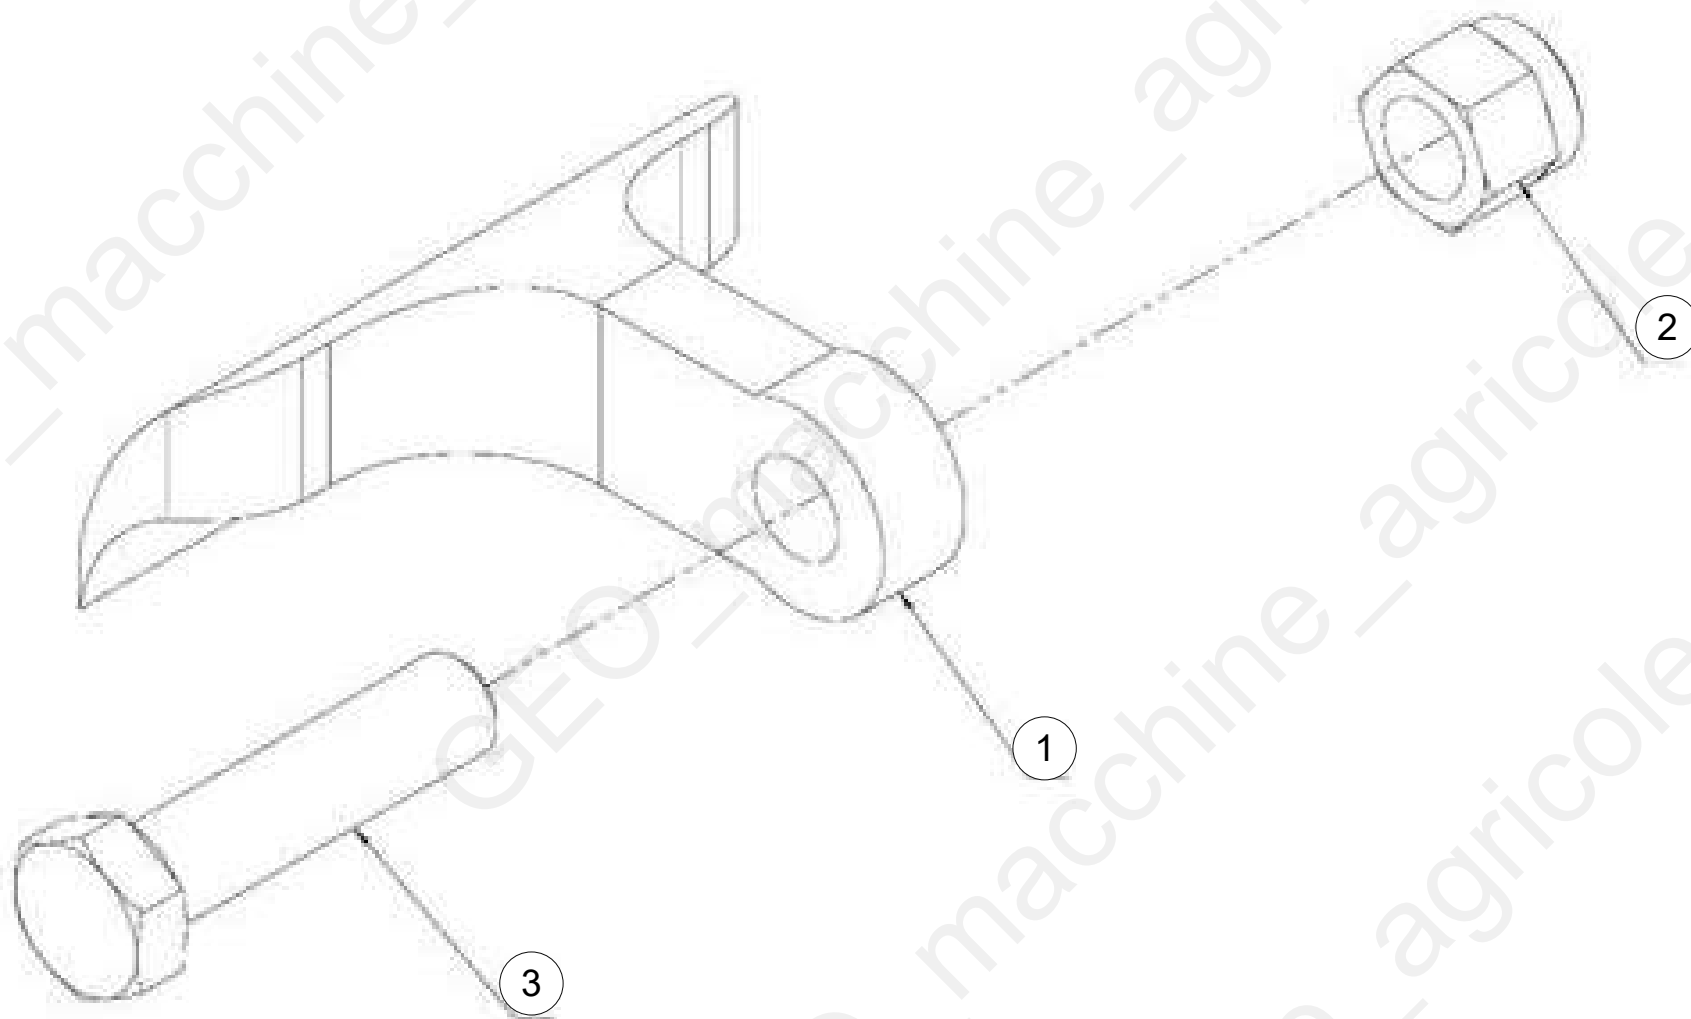

Machine: EFM


Assembly: EFM_New_parte 6



Pos	Code	Description	NOTE	Q.
1	EFM.100.00.107	HAMMER		1
2	GB889.1-M12	Locking nut M12		1
3	GB5781-M12×50	BOLT M12×50		1

EFM 2018 2019



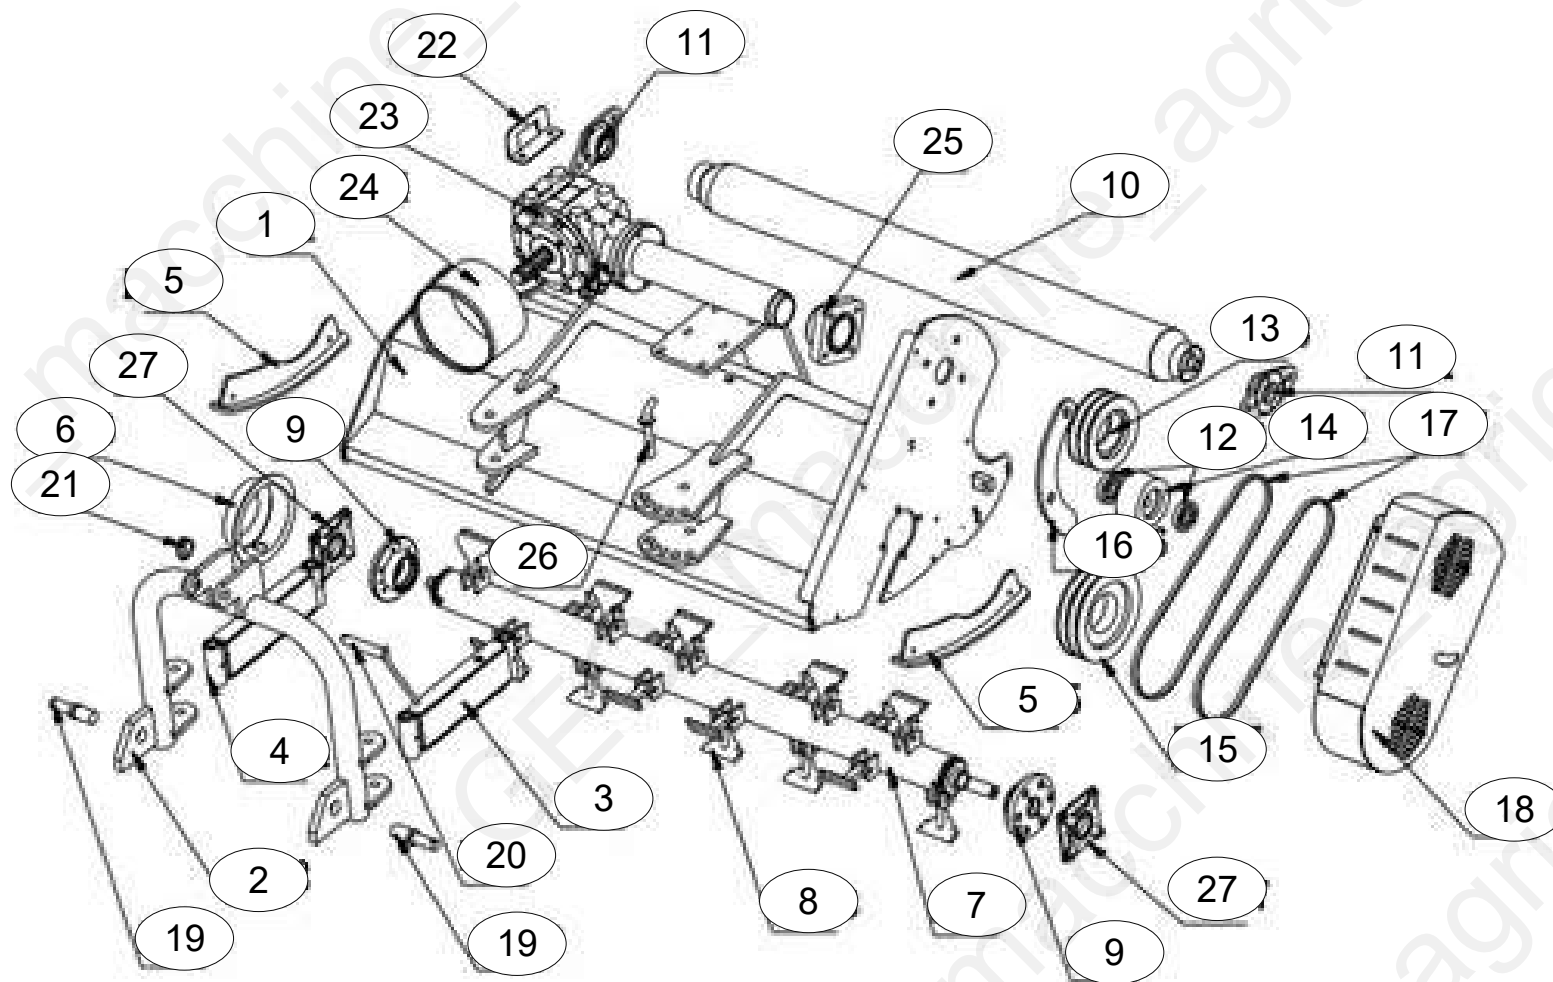

Pos	Code	Description	NOTE	Q.
1	EFM125.001	Mower Body 125		1
1	EFM145.001	Mower Body 145		1
1	EFM155.001	Mower Body 155		1
2	EFM002	3 point		1
3	EFM003	Right Point Arm		1
4	EFM004	Lift Point Arm		1
5	EFM115.023	RIHGT CHUTE BOARD ASSEMBLY		2
6	EFM006	Bearing Conver		1
7	EFM115.003	CUTTER SHAFT ASSEMBLY EFM 115		1
7	EFM125.003	CUTTER SHAFT ASSEMBLY EFM 125		1
7	EFM145.003	CUTTER SHAFT ASSEMBLY EFM 145		1
7	EFM155.003	CUTTER SHAFT ASSEMBLY EFM 155		1
8	EFM.100.00.107	HAMMER		0
9	EFM115.118	BEARING SEAT GUARD PLATE		2
10	EFM115.014	ROLLER ASSEMBLY EFM 115		1
10	EFM125.014	ROLLER ASSEMBLY EFM 125		1
10	EFM145.014	ROLLER ASSEMBLY EFM 145		1
10	EFM155.014	ROLLER ASSEMBLY EFM 155		1
11	GB.7810-UCFLU204	BEARING WITH DIAMOND SEAT UCFLU204		2
12	GB276-6006	Bearing 6006		2
13	EFG120.106.2	Big belt pulley 170mm 2 grooves		1
14	EFM014	Adjustable pully		1
15	EFG120.105.2	small belt pulley 120mm 2 grooves		1
16	EFM016	Ajustable bar		1
17	GB/1154-17.41	BELT B 41 (1041Li)		2

Pos	Code	Description	NOTE	Q.
18	EFM018	Conver		1
19	EFM019	Botton pins CAT I		2
20	EFM020	top pins CAT I		4
21	EFM021	R pins		3
22	EFM022	Hooker		1
23	EFM023	Gearbox with shaft		1
24	EFM024	Gearbox Conver		1
25	UCF207	BEARING SEAT UCF207 SQUARED		1
26	EFM026	Lock pin		1
27	EFM027	Hammer axle Bearing UCFC207		2
1	EFM115.001	Mower Body 115		1