

# Spare Part Book




LR



# Table of Contents

Tavola	Page
LR_parte 0	3

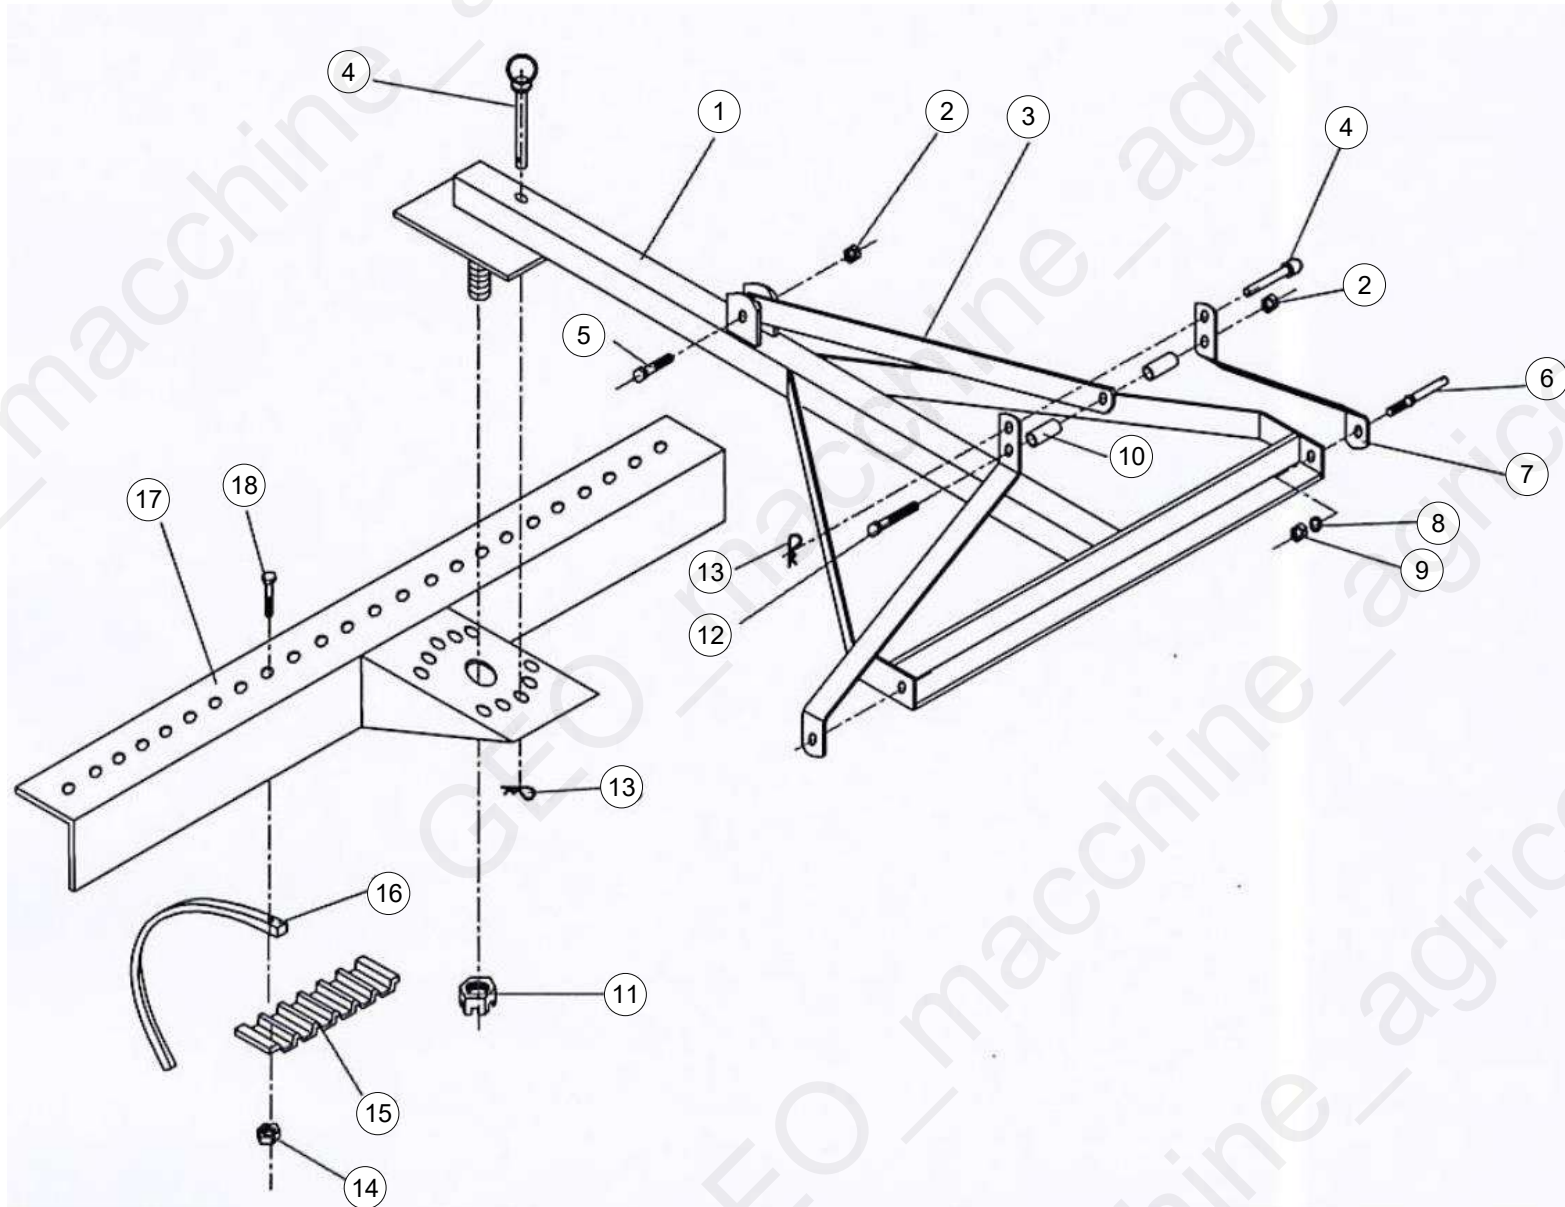

Machine: LR

Assembly: LR\_parte 0



Pos	Code	Description	NOTE	Q.
1	LR.01	Main Body		1
2	GB97-86-1-1	Nut		1
3	LR.03	Middle Arm		1
4	GB97-86-2	Pin		1
5	GB97-86-3	Bolt		1
6	GB97-86-4	Bottom Pin		1
7	LR.07	Side Arm		2
8	GB97-86-5	Washer		1
9	GB97-86-6	Plain Washer		1
10	LR.10	Bushing		1
11	LR.11	Nut		1
12	GB97-86-7-1	Bolt		1
13	GB97-86-8	Pin		1
14	GB97-86-9-1	nut		1
15	LR.15	Tine Support		5
16	LR.16	TINE		0
17	LR.17.1	Welding Body 150		1
17	LR.17.2	Welding Body 180		1
18	GB97-86-10-1	Bolt		1