

ATV BACKHOE



GEO Italy S.R.L.

Latest release: 16/03/2021

Via G. Abbate, 215, 14054 Castagnole delle Lanze AT


Page 1

Table of Contents

Tavola	Page
ATV BACKHOE	3
ATV BACKHOE_2014_2016	9
Bucket	16
ATV BH	19
MOTORE JF270-290	25

ATV BACKHOE



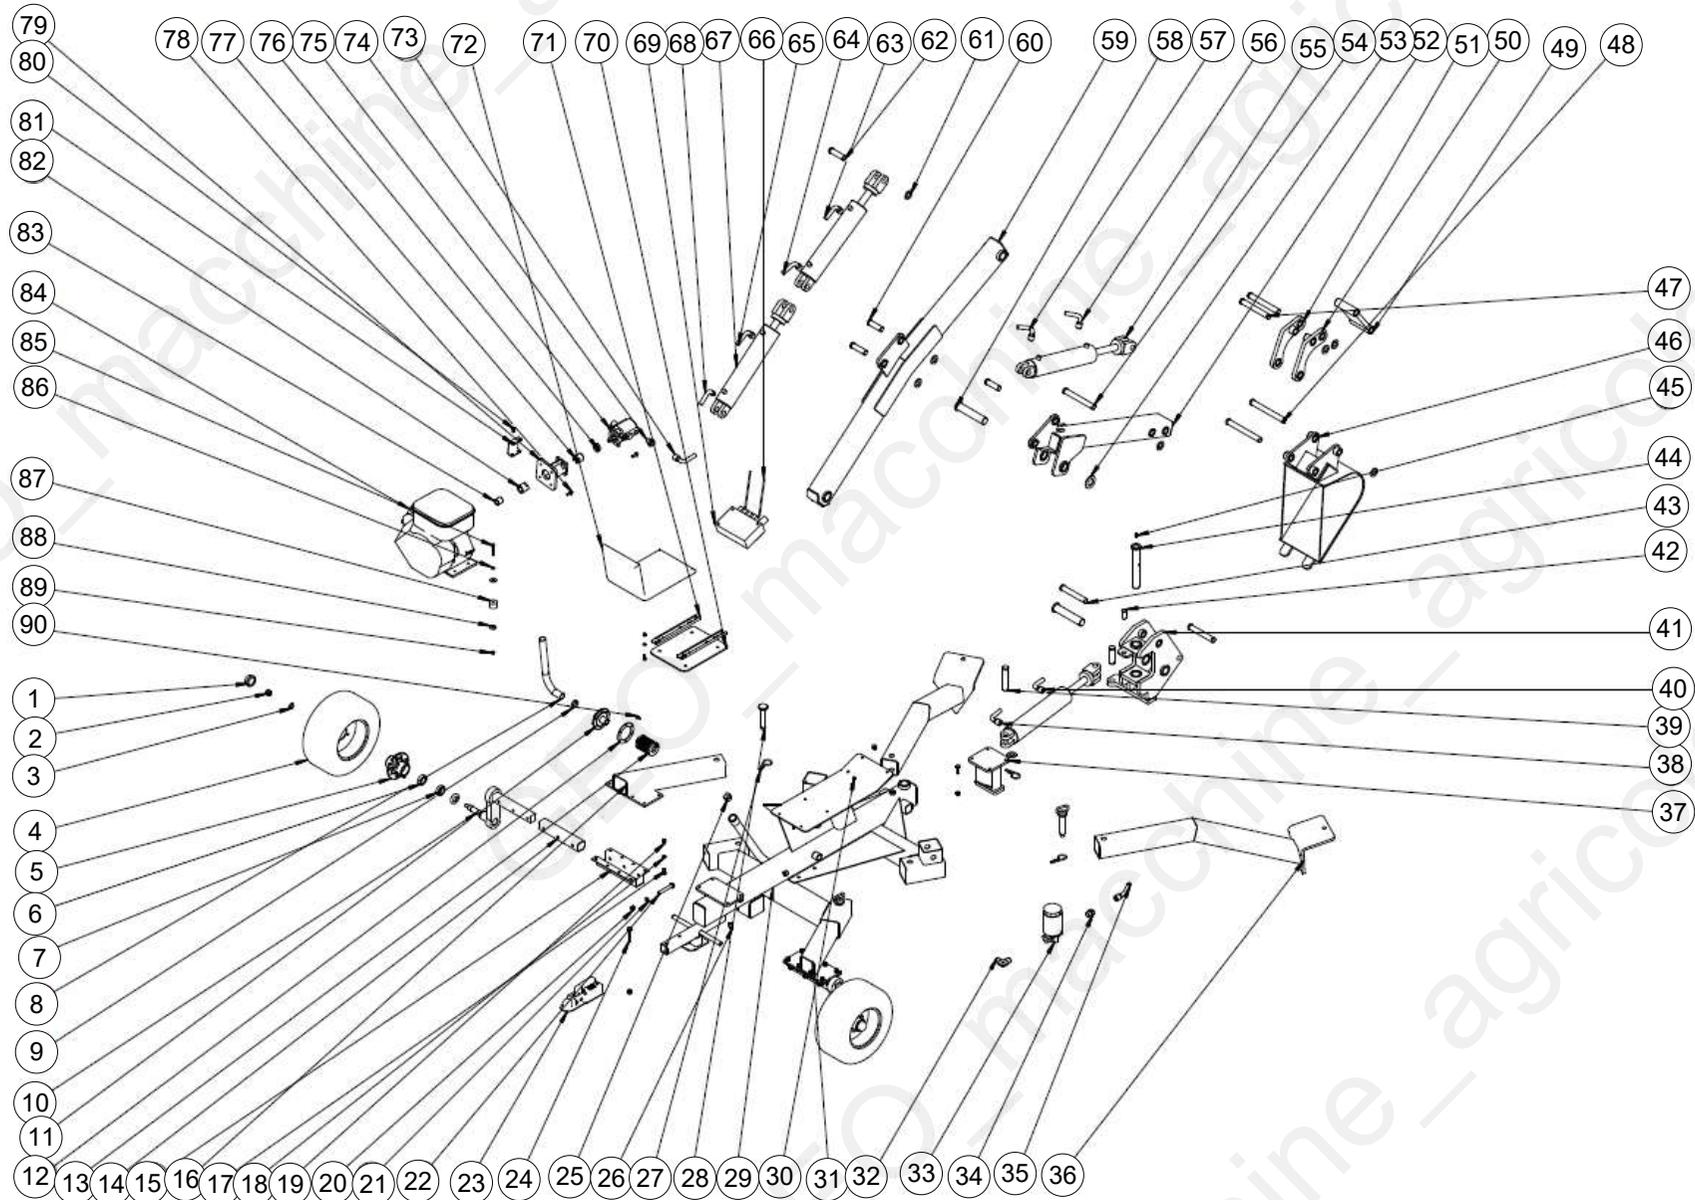

Machine: ATV BACKHOE

Assembly: ATV_BACKHOE_NEW_pæ



Pos	Code	Description	NOTE	Q.
1	ATBH-128	hub cap		2
2	GB/T.889.1.M16	Locknut M16		2
3	GB/T.97.1.16	Plain washer 16		2
4	ATBH-104	pneumatic tyre		2
5	ATBH-05	hub assembling		2
6	GB/T.297-94	bearing 30205		4
7	GB.13871-92.-30x52x8	oil seal -30 x 52 x 8		2
8	ATBH.00.01	oil pipe		1
9	ATBH.09	anchor ear		2
10	ATBH-020			2
11	ATBH-025	oil cap welding		1
12	ATBH-113	rubber insert		1
13	ATBH-112	oil filter		1
14	ATBH-103	wheel square tube		2
15	ATBH-102	connection plate		2
16	ATBH-022	wheel shaft welding 2		1
17	GB/T.5783.M10x.25	boltM10x.25		16
18	GB/T.97.1.10	Plain washer 10		39
19	GB/T.889.1.M10	Locknut M10		20
20	GB/T.889.1.M12	Locknut M12		8
21	GB/T.97.1.12	Plain washer 12		14
22	GB/T.5782.M14x.90	Bolt M14*90		6
23	ATBH.00.23	Trailer couple		1
24	GB/T.5783.M12x.70	Bolt		2
25	ATBH-115	end cap M33*1.5		1

Pos	Code	Description	NOTE	Q.
26	ATBH.00.26	end cap		1
27	ATBH.27	R Pin		19
28	ATBH-024	shaft pin welding		4
29	ATBH-011	main body welding		1
30	ATBH.30	emergency button		1
31	ATBH-021	wheel welding		1
32	LSP-3	connection part for oil filter		1
33	ATBH-126	oil filter		1
34	G3/4.x.M14	connection		1
35	ATBH.00.02	oil pipe		1
36	ATBH-019	supporting foot welding		2
37	ATBH-023	welding part for turning cylinder		1
38	ATBH.00.03	oil pipe		1
39	ATBH-109	pin 135		1
40	ATBH.00.04	oil pipe		1
41	ATBH-018	Swivel Bracket Weldment		1
42	ATBH-120	pin shaft		1
43	ATBH-111	pin 171		2
44	ATBH-105	pin 242		1
45	DIN.71412.-.AM8.x.1	grease nipple M8		3
46	ATBH-014	bucket welding		1
47	ATBH-122	pin 200		1
48	ATBH-108	pin 232		2
49	ATBH-015	connection part welding		1
50	ATBH-016	right turning part welding		1

Machine: ATV BACKHOE

Assembly: ATV_BACKHOE_NEW_pæ




Pos	Code	Description	NOTE	Q.
51	ATBH-017	left turning part welding		1
52	ATBH-013	small boom welding		1
53	GB/T.97.1.36	washer		1
54	ATBH-110	pin 200		2
55	ATBH-125	cylinder shaft		4
56	ATBH.00.05	oil pipe		1
57	ATBH.00.06	oil pipe		1
58	ATBH-106	pin 2		2
59	ATBH-012	big boom welding		1
60	ATBH-121	45#		2
61	GB/T.97.1.24	Plain washer 24		13
62	ATBH-107	pin 97		3
63	ATBH.00.07	oil pipe		1
64	ATBH.00.08	oil pipe		1
65	ATBH.00.09	oil pipe		1
66	ATBH.66	joy stick		2
67	ATBH-125	cylinder shaft		4
68	ATBH.00.10	oil pipe		1
69	ATBH-124	control valve		1
70	ATBH.70	base connection plate		1
71	ATBH.71	chair		2
72	ATBH.72	chair1		1
73	ATBH.00.11	oil pipe		1
74	M20x.M14	connection		1
75	ATBH-127	gear pump		1

Pos	Code	Description	NOTE	Q.
76	ATBH-123	bushing for gear pump		1
77	ATBH-118	connection for engine1		1
78	GB/T.5783.M8.x.25	bolt		8
79	ATBH-026	welding part for engine		1
80	GB/T.5783.M8.x.20	M8 x 20 Hexagon bolt		8
81	ATBH-119	connection part for engine		1
82	ATBH-117	connection for engine2		1
83	ATBH-116	bushing for engine		1
84	ATBH.84	engine		1
85	GB/T.5783.M8.x.60	bolt		4
86	GB/T.97.1.8	Plain washer 8		20
87	ATBH.87	rubber		4
88	GB.93-87.8	washer		8
89	GB/T.889.1.M8	bolt		8
90	GB/T.97.1.6	Plain washer 6		6

✓ BACKHOE_2014_20



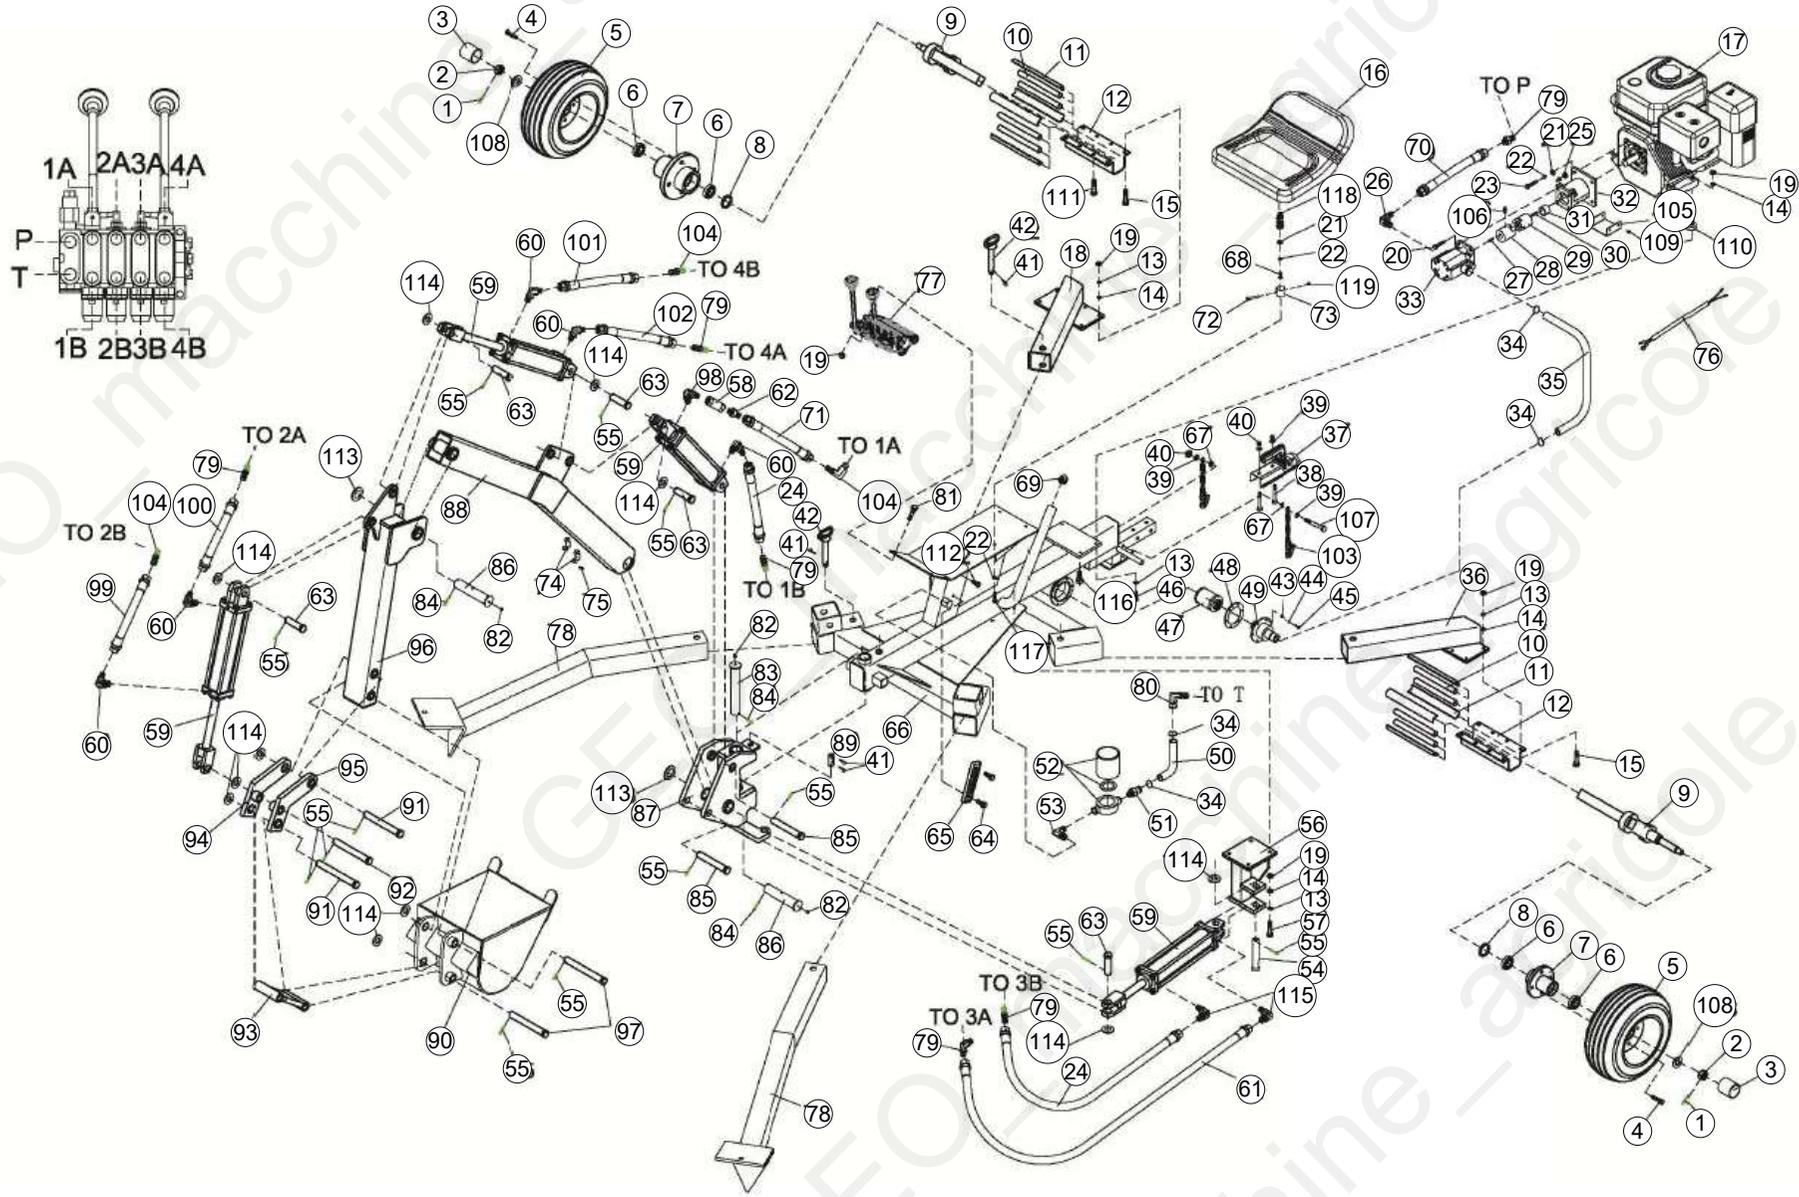

Pos	Code	Description	NOTE	Q.
1	ATV.BH.001	Cotter Pin 4x30		2
2	ATV.BH.002	Slotted Nut M20x1.5		2
3	ATV.BH.003	Wheel Axle Cap		2
4	ATV.BH.004	Lug Bolt		8
5	ATV.BH.005	Wheel		2
6	ATV.BH.006	Taper Roller Bearing		4
7	ATV.BH.007	Flange		2
8	ATV.BH.008	Oil Seal		2
9	ATV.BH.009	Axle Assembly		2
10	ATV.BH.010	Rubber Rod		8
11	ATV.BH.011	Rubber Skateboard		8
12	ATV.BH.012	Square Axle Base		2
13	ATV.BH.013	Lock Washer Ø10		24
14	ATV.BH.014	Flat Washer Ø10		24
15	ATV.BH.015	Hex Bolt M10x30		12
16	ATV.BH.016	Seat		1
17	ATV.BH.017	Engine		1
18	ATV.BH.018	Wheel Frame Connector Tube (Right)		1
19	ATV.BH.019	Nylon Lock Nut M10		27
20	ATV.BH.020	Hex Bolt M8x30		4
21	ATV.BH.021	Flat Washer Ø8		8
22	ATV.BH.022	Lock Washer Ø8		16
23	ATV.BH.023	Hex Bolt M8x25		4
24	ATV.BH.024	Hydraulic Hose 700		2
25	ATV.BH.025	Nylon Lock Nut M8		4

Pos	Code	Description	NOTE	Q.
26	ATV.BH.026	Outlet Connector of Pump		1
27	ATV.BH.027	Semicircular Key		1
28	ATV.BH.028	Gear Pump Connector		1
29	ATV.BH.029	Engine Connector		1
30	ATV.BH.030	Flat Key Ø8x30		1
31	ATV.BH.031	Bushing Ø25x30		1
32	ATV.BH.032	Gear Pump Stand		1
33	ATV.BH.033	Gear Pump		1
34	ATV.BH.034	Clamp		4
35	ATV.BH.035	Gear Pump Oil Pipe 500		1
36	ATV.BH.036	Wheel Frame Connector Tube (Left)		1
37	ATV.BH.037	50mm Coupler		1
38	ATV.BH.038	Hex Bolt M12x80		2
39	ATV.BH.039	Flat Washer Ø12		4
40	ATV.BH.040	Nylon Lock Nut M12		3
41	ATV.BH.041	R Pin Ø3x55		6
42	ATV.BH.042	Safety Pin		4
43	ATV.BH.043	Flat Washer Ø6		6
44	ATV.BH.044	Lock Washer Ø6		6
45	ATV.BH.045	Hex Bolt M6x20		6
46	ATV.BH.046	Hex Bolt M10X25		4
47	ATV.BH.047	Inlet Filter		1
48	ATV.BH.048	Rubber Washer		1
49	ATV.BH.049	Filter Fix Plate		1
50	ATV.BH.050	Valve Return Oil Hose 370		1

Pos	Code	Description	NOTE	Q.
51	ATV.BH.051	Inlet Connector of Filter		1
52	ATV.BH.052	Outlet Filter		1
53	ATV.BH.053	Outlet Connector of Filter		1
54	ATV.BH.054	Pin Ø30X134		1
55	ATV.BH.055	Cotter Pin Ø4x50		13
56	ATV.BH.056	Swivel Cylinder Base		1
57	ATV.BH.057	Hex Bolt M10x45		4
58	ATV.BH.058	Single Throttling Valve		1
59	ATV.BH.059	Cylinder		4
60	ATV.BH.060	Right Angle Connector I		5
61	ATV.BH.061	Hydraulic Hose 1100		1
62	ATV.BH.062	Connector of Throttling Valve		1
63	ATV.BH.063	Short Pin Ø30x97		5
64	ATV.BH.064	Hex Bolt M12x30		2
65	ATV.BH.065	Gauge		1
66	ATV.BH.066	Frame Weldment		1
67	ATV.BH.067	Thick Flat WasherØ12		2
68	ATV.BH.068	Hex Bolt M5/16"-1"		4
69	ATV.BH.069	Oil Screw ZG1		1
70	ATV.BH.070	Hydraulic Hose 700		1
71	ATV.BH.071	Hydraulic Hose 850		1
72	ATV.BH.072	Antiskid Plate 2		1
73	ATV.BH.073	Antiskid Plate 1		1
74	ATV.BH.074	Rivet 4x15		12
75	ATV.BH.075	Half-round Screw M5x10		12


Pos	Code	Description	NOTE	Q.
76	ATV.BH.076	Switch Wire for Engine		1
77	ATV.BH.077	Control Valve		1
78	ATV.BH.078	Outrigger		2
79	ATV.BH.079	Connector of Valve		7
80	ATV.BH.080	Outlet Connector of Valve		1
81	ATV.BH.081	Hex Bolt M10x30		3
82	ATV.BH.082	Oil Cup M6		3
83	ATV.BH.083	Axis Pin of Swivel Bracket		1
84	ATV.BH.084	Cotter Pin 4x60		3
85	ATV.BH.085	Long Pin Ø30x170		2
86	ATV.BH.086	Axis Pin of Swivel Arm Ø48x185		2
87	ATV.BH.087	Swivel Bracket Weldment		1
88	ATV.BH.088	Long Arm Weldment		1
89	ATV.BH.089	Fixed Pin Ø19x50		1
90	ATV.BH.090	Bucket		1
91	ATV.BH.091	Long Pin Ø30x210		2
92	ATV.BH.092	Short Pin Ø30x200		1
93	ATV.BH.093	Bucket Linkage		1
94	ATV.BH.094	Arm Linkage I		1
95	ATV.BH.095	Arm Linkage II		1
96	ATV.BH.096	Short Arm Weldment		1
97	ATV.BH.097	Pin of Bucket Ø30x212		2
98	ATV.BH.098	Angle Connector of Cylinder II		1
99	ATV.BH.099	Hydraulic Hose 2850		1
100	ATV.BH.100	Hydraulic Hose 2550		1

Pos	Code	Description	NOTE	Q.
101	ATV.BH.101	Hydraulic Hose 2100		1
102	ATV.BH.102	Hydraulic Hose 1700		1
103	ATV.BH.103	Safety Chain		2
104	ATV.BH.104	Inlet Connector of Valve		2
105	ATV.BH.105	Coupling Guard		1
106	ATV.BH.106	Screw M6x10		1
107	ATV.BH.107	Hex Bolt M12X90		1
108	ATV.BH.108	Flat Washer Ø20		2
109	ATV.BH.109	Hex Bolt M5x10		4
110	ATV.BH.110	Block		4
111	ATV.BH.111	Hex Bolt M10x35		4
112	ATV.BH.112	Plug Screw		1
113	ATV.BH.113	Washer Ø38		2
114	ATV.BH.114	Flat Washer Ø24		13
115	ATV.BH.115	Angle Connector of Swivel cylinder III		2
116	ATV.BH.116	Oil Plug		1
117	ATV.BH.117	Hex Bolt M8x20		4
118	ATV.BH.118	Spring of seat		4
119	ATV.BH.119	Nylon Lock Nut M6		4


Bucket



*Standard 300mm
Bucket*

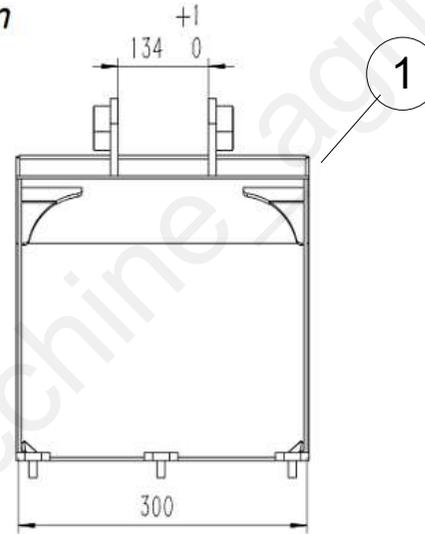

*Optional 600mm
Bucket*

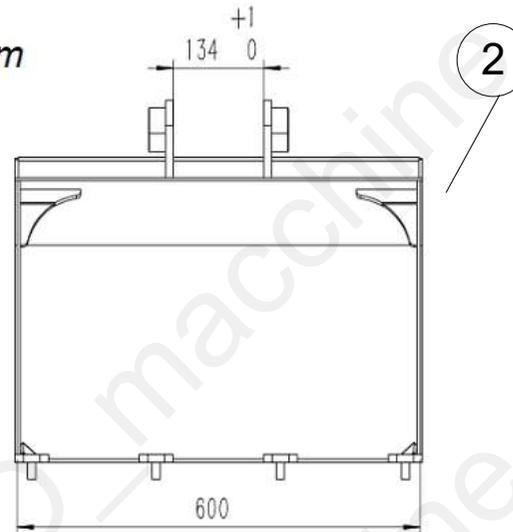

Machine: Bucket

Assembly: Buckets




Pos	Code	Description	NOTE	Q.
1	ATBH-014	bucket welding		1
2	ATBH-014.600	bucket welding 600		1

ATV BH



ATV BACKHOE K

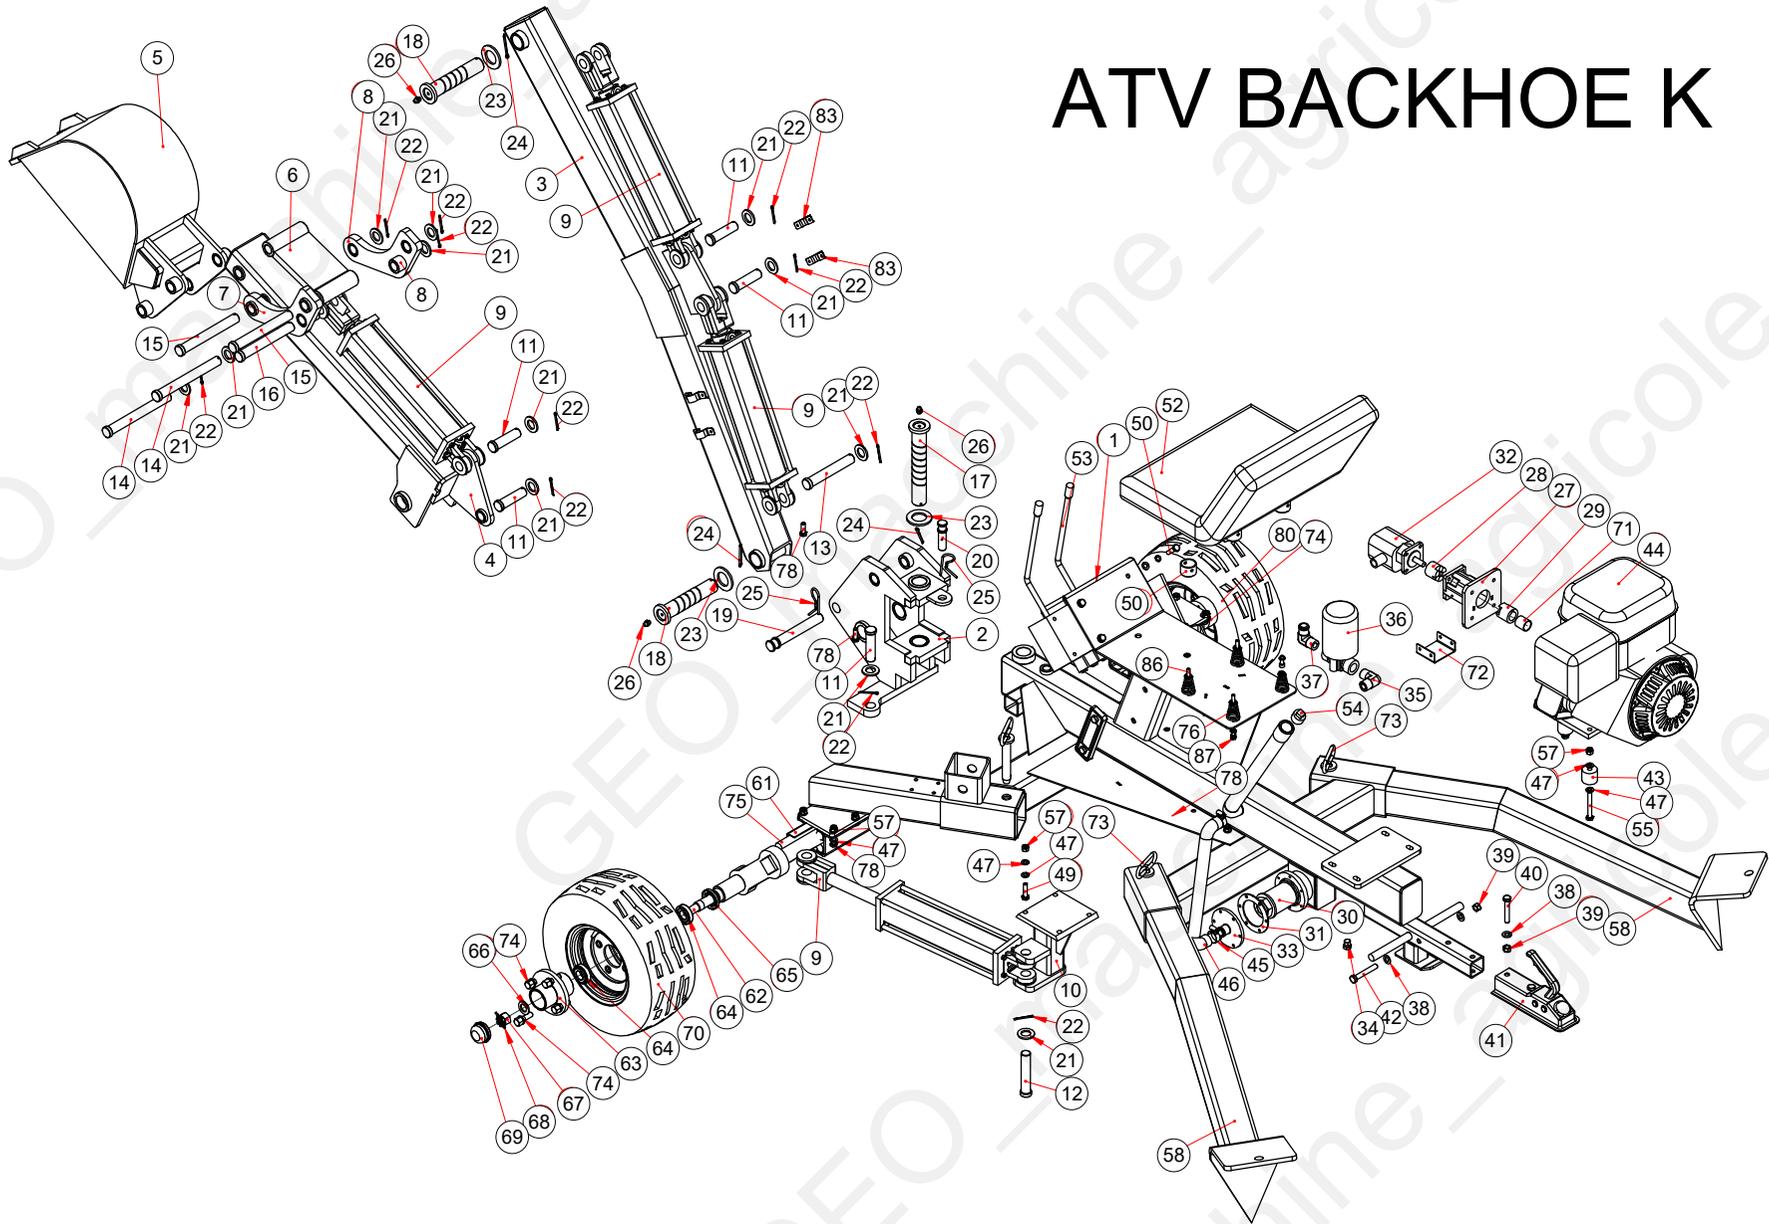

Machine: ATV BH

Assembly: ATV BH



Pos	Code	Description	NOTE	Q.
1	ATVBH.010	main frame weldment		1
2	ATVBH.012	weldment for turning cylinder		1
3	ATVBH.013	big boom weldment		1
4	ATVBH.014	small boom weldment		1
5	ATVBH.015	bucket weldment		1
6	ATVBH.016	linkage weldment		1
7	ATVBH.017	bucket linkage weldment		1
8	ATVBH.018	bucket linkage weldment2		1
9	BHA.001	big boom cylinder		4
10	ATVBH.011	swing axle weldment		1
11	ATVBH.107	cylinder pin		5
12	ATVBH.108	swing cylinder pin		1
13	ATVBH.109	big boom cylinder pin		1
14	ATVBH.110	bucket pin		2
15	ATVBH.111	linkage long pin		2
16	ATVBH.112	linkage short pin		1
17	ATVBH.025	main axis of rotation weldment		1
18	ATVBH.026	Arm connecting shaft weldment		2
19	ATVBH.106	boom safety pin		1
20	BH6A.112	Rotating joint fixed pin		1
21	GB/T 95-2002	plain washer C 24		13
22	GB/T 91-2000	Cotter pin 2.5*25		12
23	GB/T 95-2002	plain washer C 24		3
24	GB/T 91-2000	Cotter pin 2.5*25		3
25	ATVBH.025	main axis of rotation weldment		2

Machine: ATV BH

Assembly: ATV BH



Pos	Code	Description	NOTE	Q.
26	ATVBH.026	Arm connecting shaft weldment		3
27	ATVBH.027	coupling outer pipe weldment		1
28	BH6A.111	pump coupling		1
29	BH6A.222	coupling		1
30	WU-63X80-J	filtration		1
31	BH6A.118	rubber blanket		1
32	CBNA-8.8-2.1J	hydraulic pump		1
33	BH6A.019	oil tank outlet weldment		1
34	ATVBH.136	oil plug		1
35	BH7-05-128	Filter tank connector		1
36	YX0811A	Filter BH-HS		1
37	ATVBH.132	Filter valve outlet pipe connector		1
38	GB/T 95-2002	plain washer C 24		4
39	GB/T 889.1-2000	lock nutM12		3
40	GB/T 5781-2000	bolt M12X70		2
41	ATVBH.41	Ball connector		1
42	GB/T 5783-2000	bolt M12*80		1
43	BH6A.114	Engine shock block		4
44	JD290	engine		1
45	JB/T 8870-1999	hose clamp		2
46	ATVBH.46	Transparent steel pipe		1
47	GB/T 95-2002	plain washer C 24		48
48	GB/T 859-1987	spring washer 10		3
49	GB/T 5783-2000	bolt M12*80		7
50	BH6A.028	seat base weldment		4

Machine: ATV BH

Assembly: ATV BH



Pos	Code	Description	NOTE	Q.
51	HOIO	thermometer		1
52	BH6A.101	seat		1
53	ZCDB-L15F-4OT-1-M14	reversing valve		1
54	ATVBH.137	Oil inlet plug		1
55	GB/T 5782-2000	Bolt M8X40		4
56	GB/T 96.2-2002	plain washer 10		2
57	GB/T 889.1-2000	lock nutM12		24
58	ATVBH.030	arck leg weldment		2
59	BH6A.015	round bar weldment		1
60	BH6A.102	Supporting wheel arm press plate		2
61	BH6A.103	Shock strip pressing plate		8
62	ATVBH.023	wheel weldment		1
63	ATVBH.024	wheel flange weldment		2
64	GB/T 297-2015	bearing 30205		4
65	GB/T 13871.1-2007	oil seal 35*55*8		2
66	GB/T 95-2002	plain washer C 24		2
67	GB/T 9457-1988	bolt M20X1.5		2
68	GB/T 91-2000	Cotter pin 2.5*25		2
69	atv120-106	end cap		2
70	16*7.5-8	wheel		2
71	BH6A.333	engine spacer		1
72	ATVBH.444	Coupling protection cover		1
73	ATVBH.028	arch pin		4
74	ATVBH.151	hub bolt		8
75	BH6A.104	Article damping		8

Machine: ATV BH


Assembly: ATV BH




Pos	Code	Description	NOTE	Q.
76	BH6A.119	seat spring		4
77	GB/T 5783-2000	bolt M12*80		4
78	GB/T 5783-2000	bolt M12*80		12
79	BH6A.016	support wheel beam weldment(right)		1
80	ATVBH.029	support wheel beam weldment(left)		1
81	ATVBH.138	Air intake bolt		1
82	ATVBH.82	bonded washer10		1
83	ATVBH.777	25tubing clamp		6
84	GB/T 95-2002	plain washer C 24		9
85	GB/T 859-1987	spring washer 10		8
86	GB/T 70.1-2008	bolt M8*25		4
87	GB/T 5783-2000	bolt M12*80		4

MOTORE JF270-290




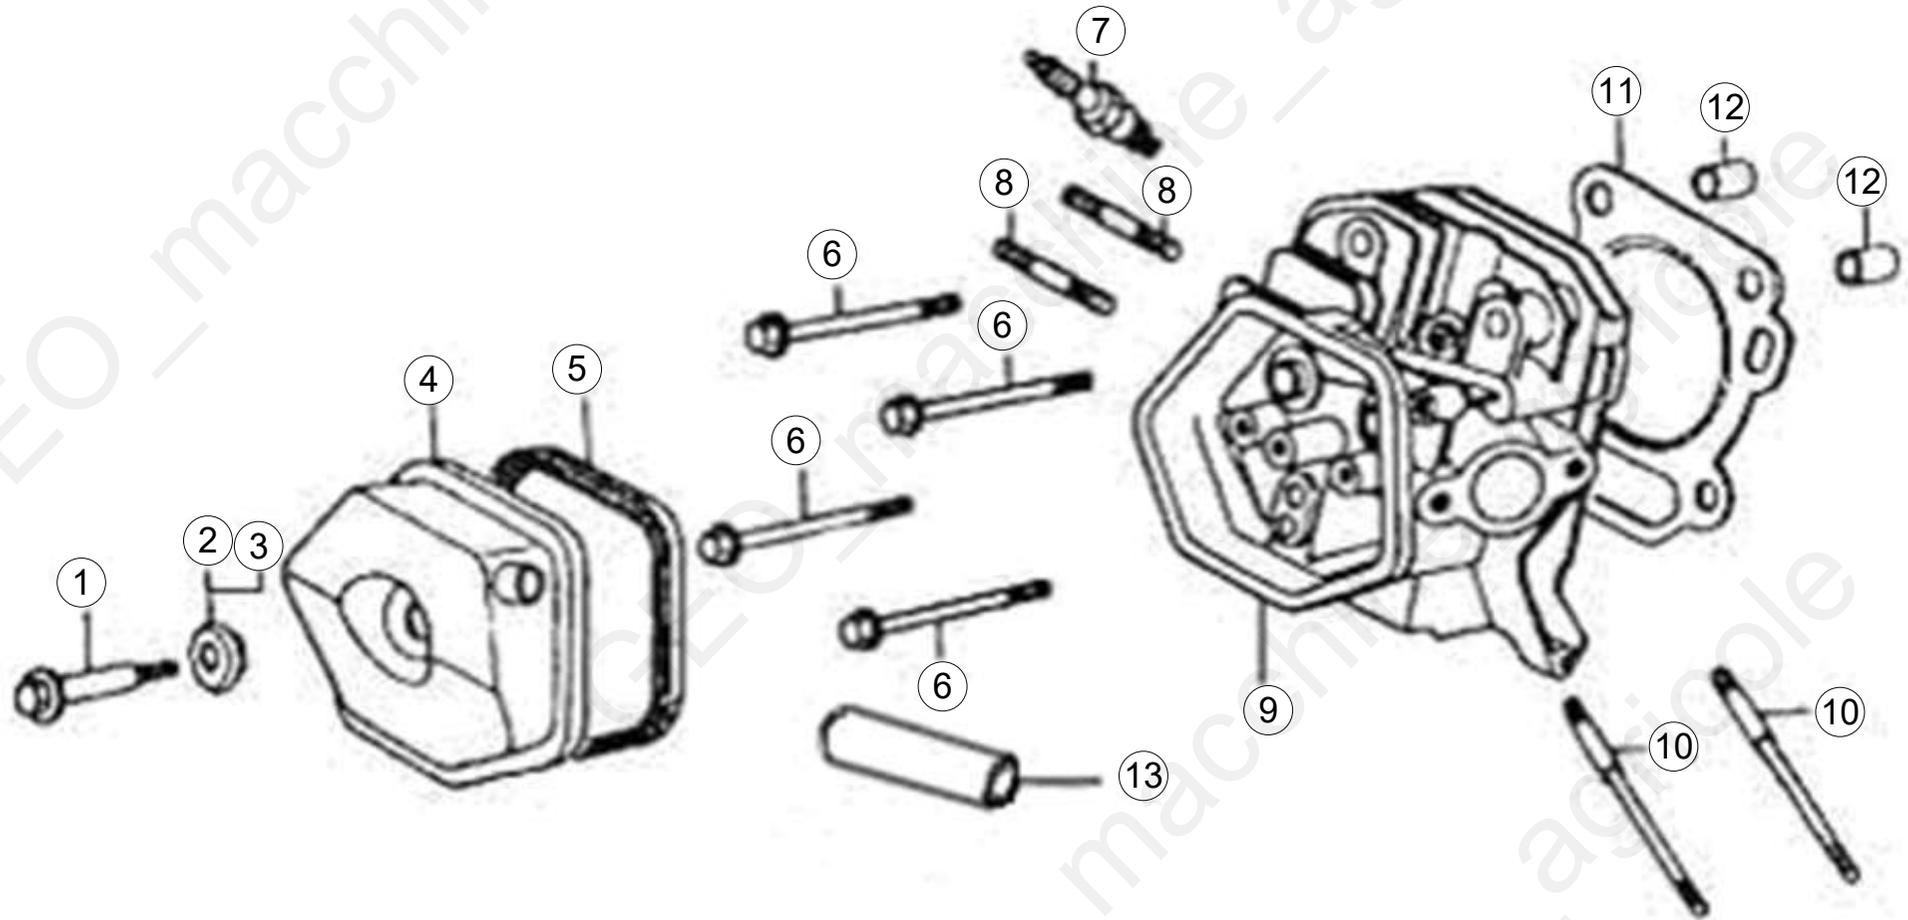


Pos	Code	Description	NOTE	Q.
1	JF270-A-01	HEAD COVER COMP. BOLT		1
2	JF270-A-02	HEAD COVER WASHER COMP.		1
3	JF270-A-03	WASHER COVER PACKING		1
4	JF270-A-04	HEAD COVER COMP. ASSEMBLY		1
5	JF270-A-05	HEAD COVER PACKING		1
6	JF270-A-06	FLANGE BOLT (M10×80)		4
7	JF270-A-07	SPARK PLUG		1
8	JF270-A-08A	EXHAUST PIPE STUD BOLT		2
9	JF270-A-09	CYLINDER HEAD COMP. ASSEMBLY		1
10	JF270-A-10A	CARBURETOR STUD BOLT		2
11	JF270-A-11	CYLINDER HEAD SEALING PAD		1
12	JF270-A-12	DOWEL PIN (diam10×diam12×20)		2
13	JF270-A-13A	BREATHING TUBE		1

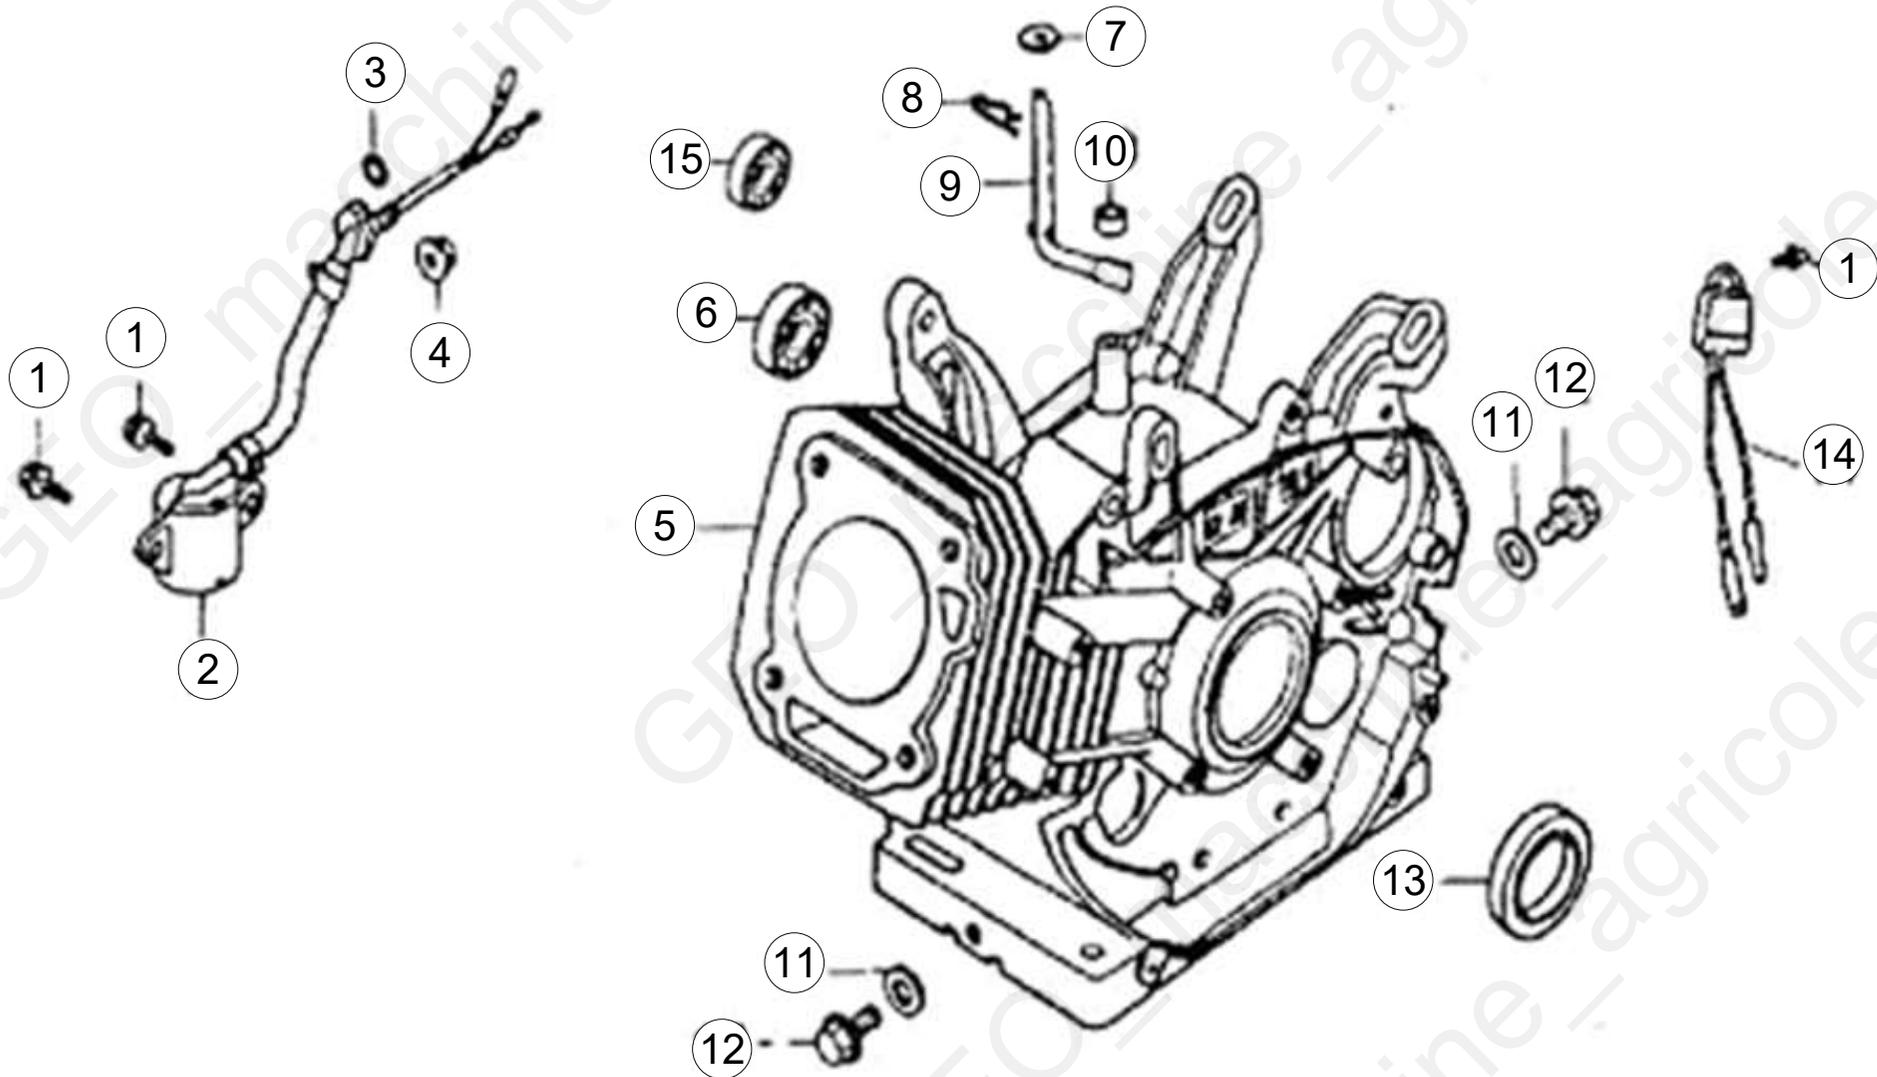

Pos	Code	Description	NOTE	Q.
1	JF270-B-01	FLANGE BOLT (M6×14)		3
2	JF240-B-02	OIL LEVEL SWITCH ASSY.		1
3	JF240-B-03	O-RING (14mm)		1
4	JF270-B-02	FLANGE NUT (10 mm)		1
5	JF270-B-03	CRANK CASE		1
6	JF270-B-04	BALL BEARING (6207)		1
7	JF270-B-05	WASHER (diam8.3×diam17×1)		1
8	JF270-B-06	LOCK PIN (10 mm)		1
9	JF270-B-07	GOVERNOR ARM SHAFT		1
10	JF270-B-08	OIL SEAL (diam8×diam14×5)		1
11	JF270-B-09	DRAIN PLUG WASHER (12 mm)		2
12	JF270-B-10	DRAIN PLUG BOLT		2
13	JF270-B-11	OIL SEAL (diam35×diam52×8)		1
14	JF270-B-12	OIL PROTECTOR		1
15	JF270-B-13	BALL BEARING (6202)		1

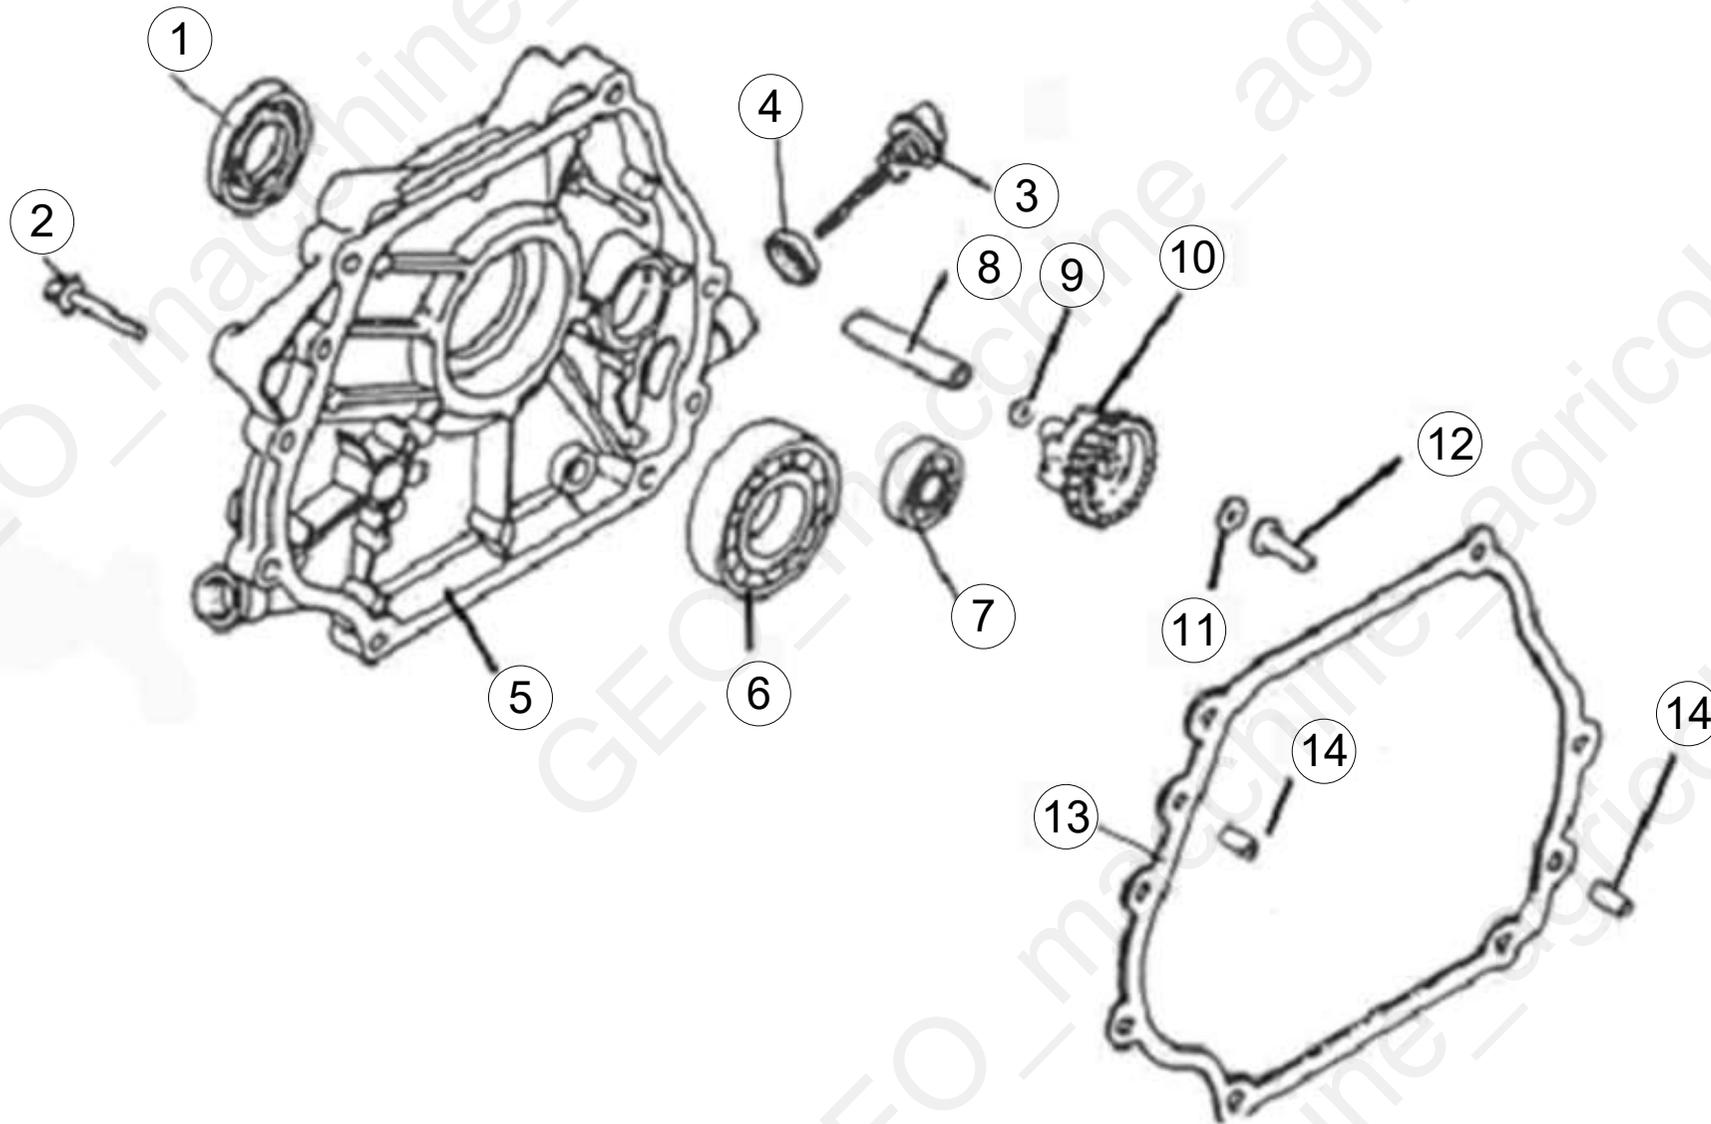

Pos	Code	Description	NOTE	Q.
1	JF270-B-11	OIL SEAL (diam35×diam52×8)		1
2	JF270-C-01	FLANGE BOLT (M8×35)		7
3	JF270-C-02A	OIL SCALE		2
4	JF270-C-03	OIL SCALE SEAL RING		2
5	JF270-C-04A	CRANKCASE COVER		1
6	JF270-B-04	BALL BEARING (6207)		1
7	JF270-B-13	BALL BEARING (6202)		1
8	JF270-C-05	SLIDER SHAFT		1
9	JF270-C-06	GOVERNOR GEAR WASHER (6 mm)		1
10	JF270-C-07	GOVERNOR GEAR		1
11	JF270-C-08	SLIDER WASHER (6 mm)		1
12	JF270-C-09	GOVERNOR SLIDER		1
13	JF270-C-10	CRANKCASE COVER PAD		1
14	JF240-C-11	DOWEL PIN (8×12)		2

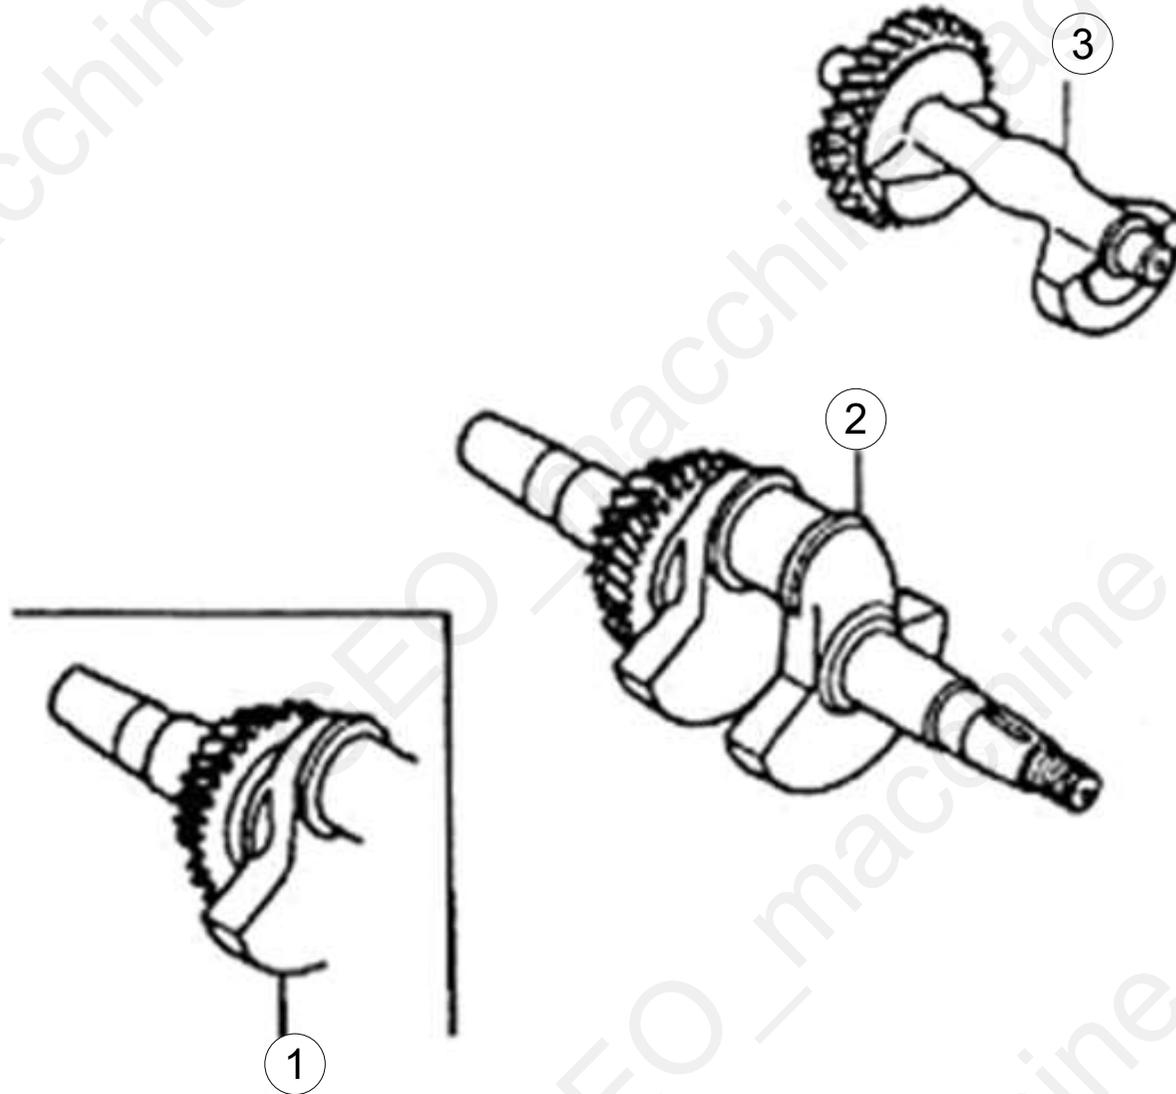


Machine: MOTORE JF270-290


Assembly: Part4




Pos	Code	Description	NOTE	Q.
1	JF270-D-01	CRANK		1
2	JF270-D-02	CRANKSHAFT COMP.		1
3	JF270-D-03	BALANCE SHAFT		1

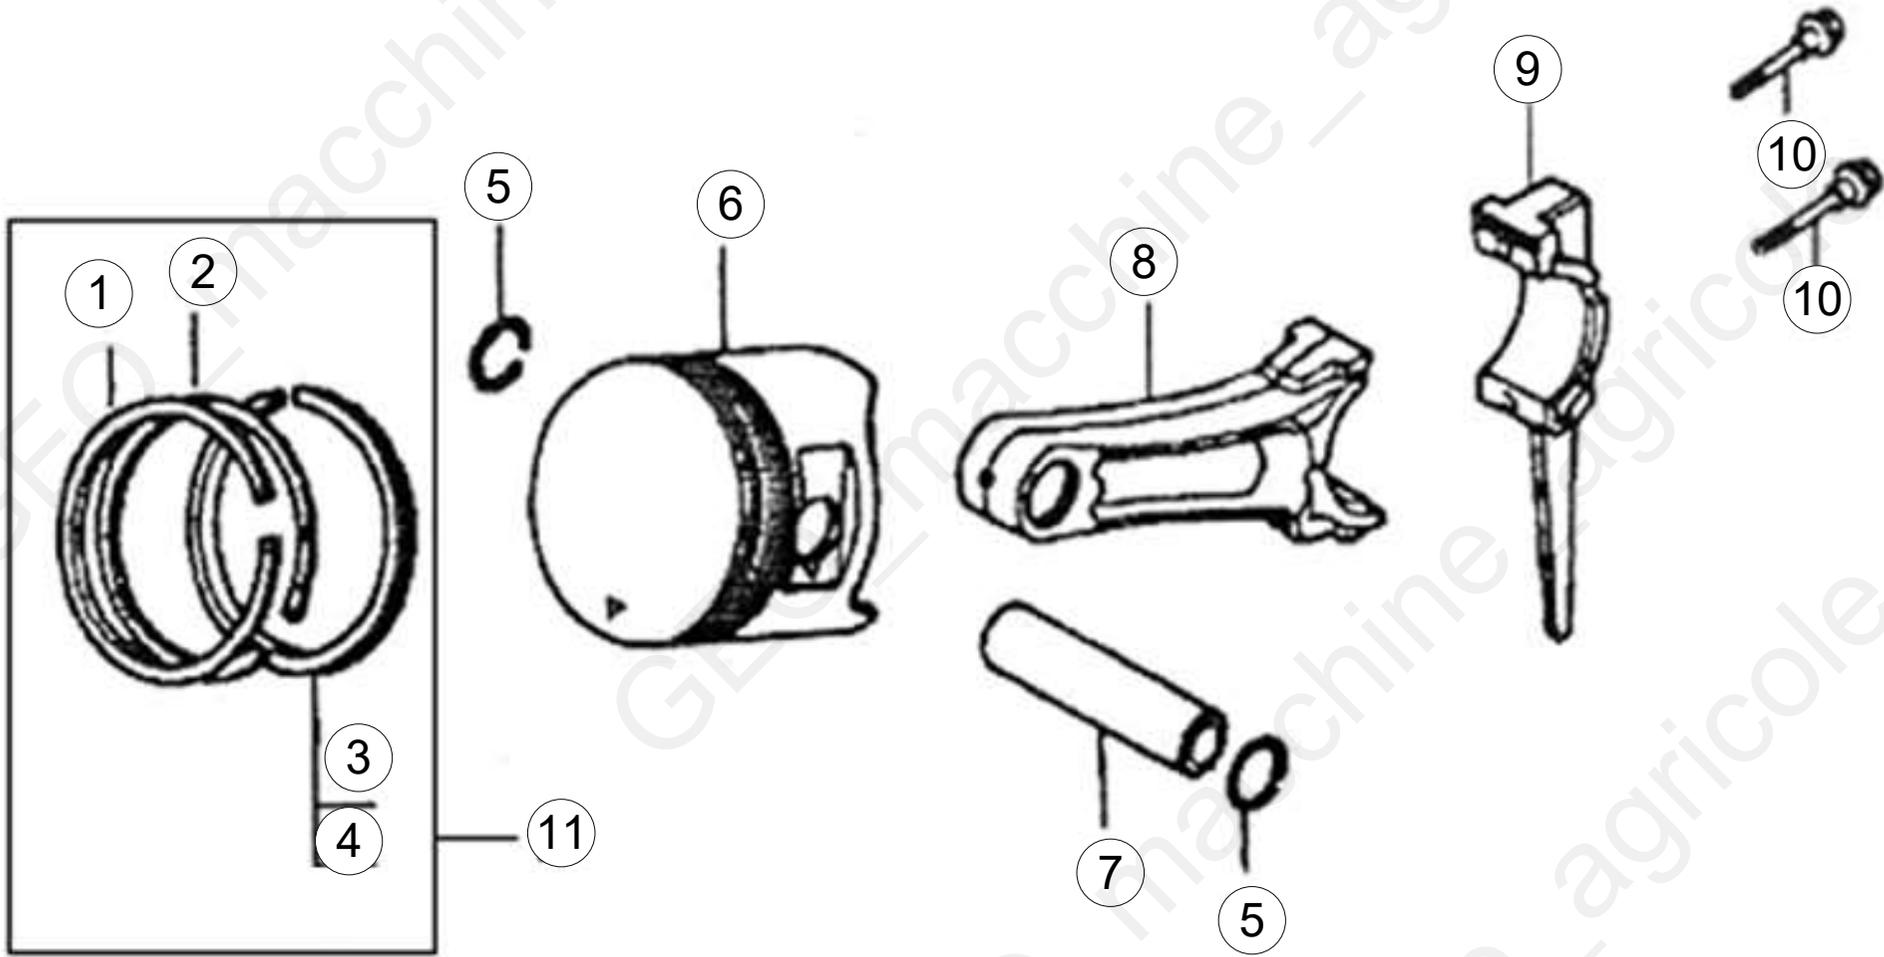


Pos	Code	Description	NOTE	Q.
1	JF270-E-01	COMPRESSION RING A		1
2	JF270-E-02	COMPRESSION RING B		1
3	JF270-E-03	OIL RING A		2
4	JF270-E-04	OIL RING B		1
5	JF240-E-05	PISTON PIN CLIP (20 mm)		2
6	JF270-E-05	PISTON		1
7	JF270-E-06	PISTON PIN		1
8	JF270-E-07	CONNECTING ROD		1
9	JF270-E-08	CONNECTING COVER		1
10	JF270-E-09	CONNECTING ROD BOLT		2
11	JF270-E-10	PISTON RING SET		1

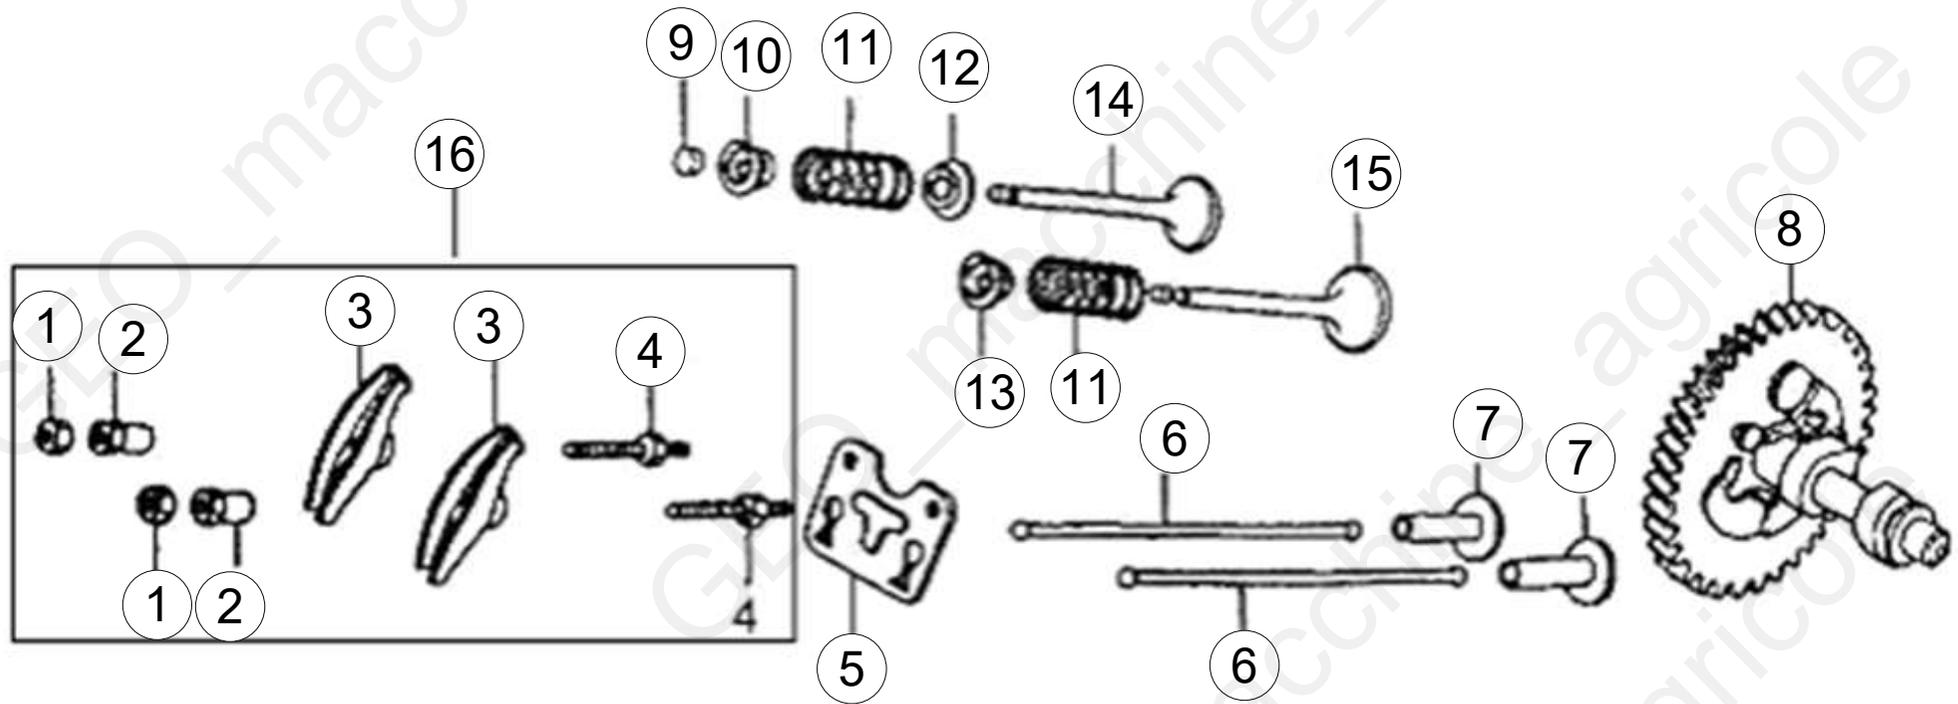

Pos	Code	Description	NOTE	Q.
1	JF270-F-01	LOCKNUT		2
2	JF270-F-02	ADJUSTING NUT		2
3	JF270-F-03	ROCKER ARM		2
4	JF270-F-04	ROCKER BOLT (8 mm)		2
5	JF270-F-05	PUSH ROD GUIDE PLATE		1
6	JF240-F-06	ROD PUSH		2
7	JF240-F-07	CAM FOLLOWER		2
8	JF270-F-08	CAMSHAFT		1
9	JF270-F-06	EX. VALVE HELMET		1
10	JF270-F-07	EX. VALVE SPRING RETAINER		1
11	JF270-F-08	CAMSHAFT		2
12	JF270-F-09	VALVE SPRING SEAT		2
13	JF270-F-10	IN. VALVE SPRING RETAINER		1
14	JF270-F-11	EX. VALVE		1
15	JF270-F-12	IN. VALVE		1
16	JF270-F-13	ROCKER ASSEMBLY		1

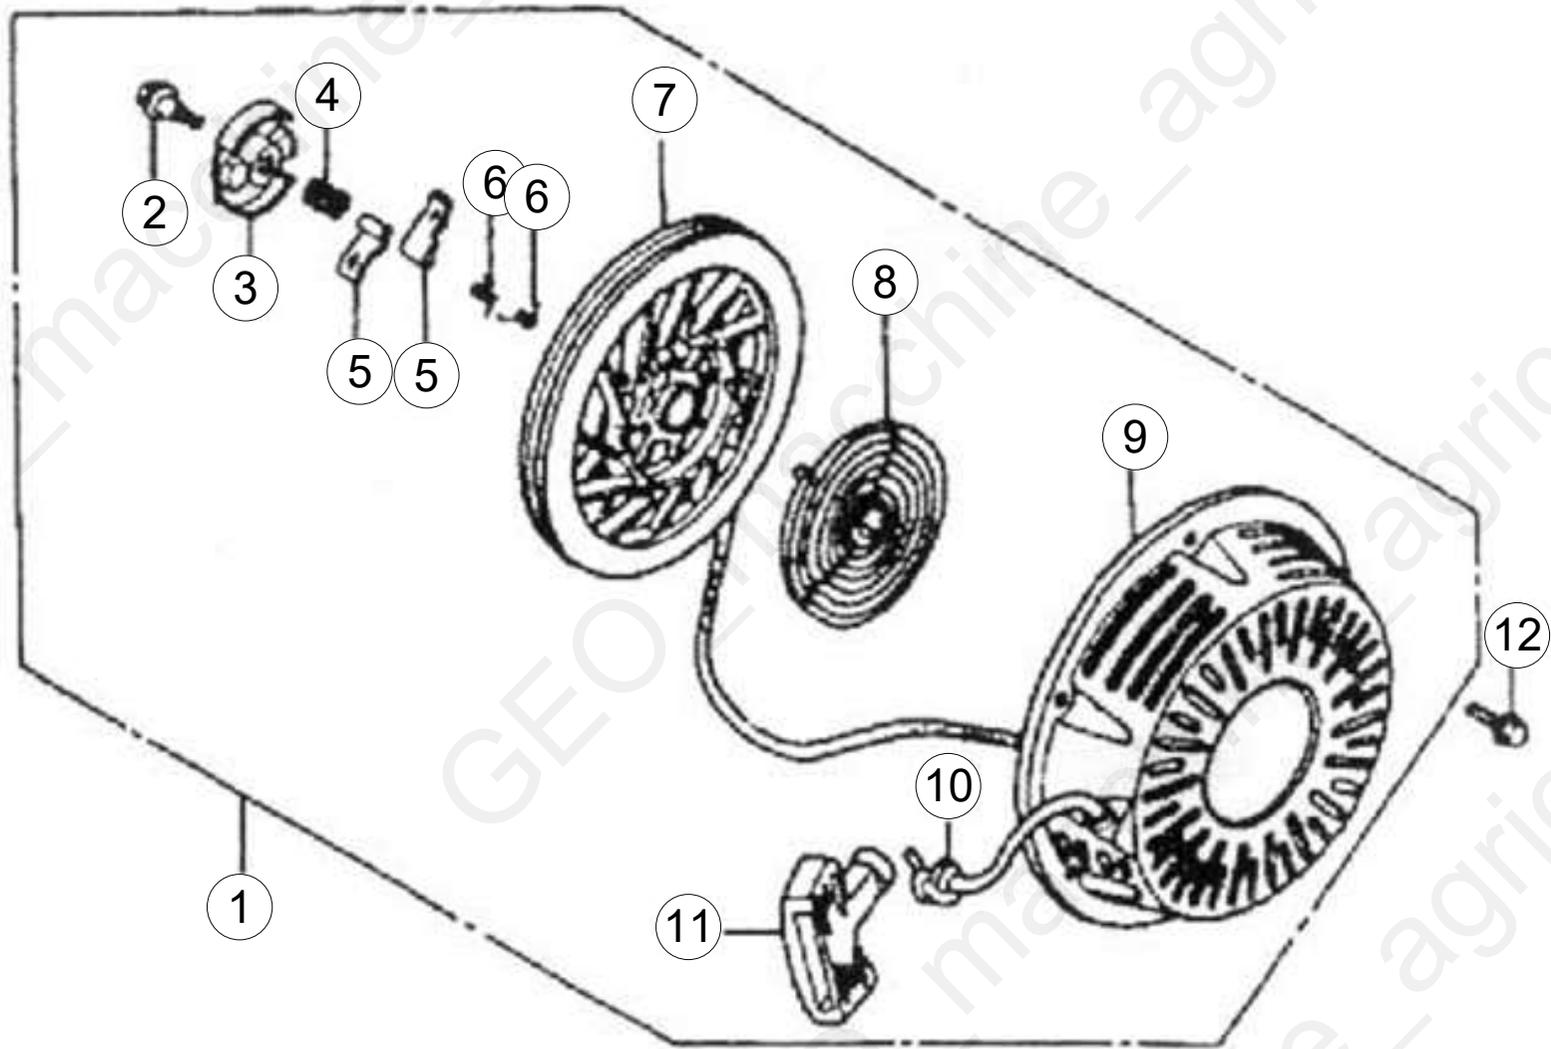

Pos	Code	Description	NOTE	Q.
1	JF270-G-01	RECOIL STARTER ASSEMBLY		1
2	JF270-G-02	CENTER SCREW		1
3	JF270-G-03	SPRING RETAINER		1
4	JF270-G-04	FRICTION SPRING		1
5	JF270-G-05	STARTER RATCHET		2
6	JF270-G-06	RATCHET SPRING		2
7	JF270-G-07	RECOIL STARTER REEL		1
8	JF270-G-08	START RETURN SPRING		1
9	JF270-G-09	RECOIL STARTER CASE COMP.		1
10	JF270-G-10	RECOIL STARTER ROPE		1
11	JF270-G-11	STARTER GRIP		1
12	JF270-G-12	FLANGE BOLT (M6×8)		3

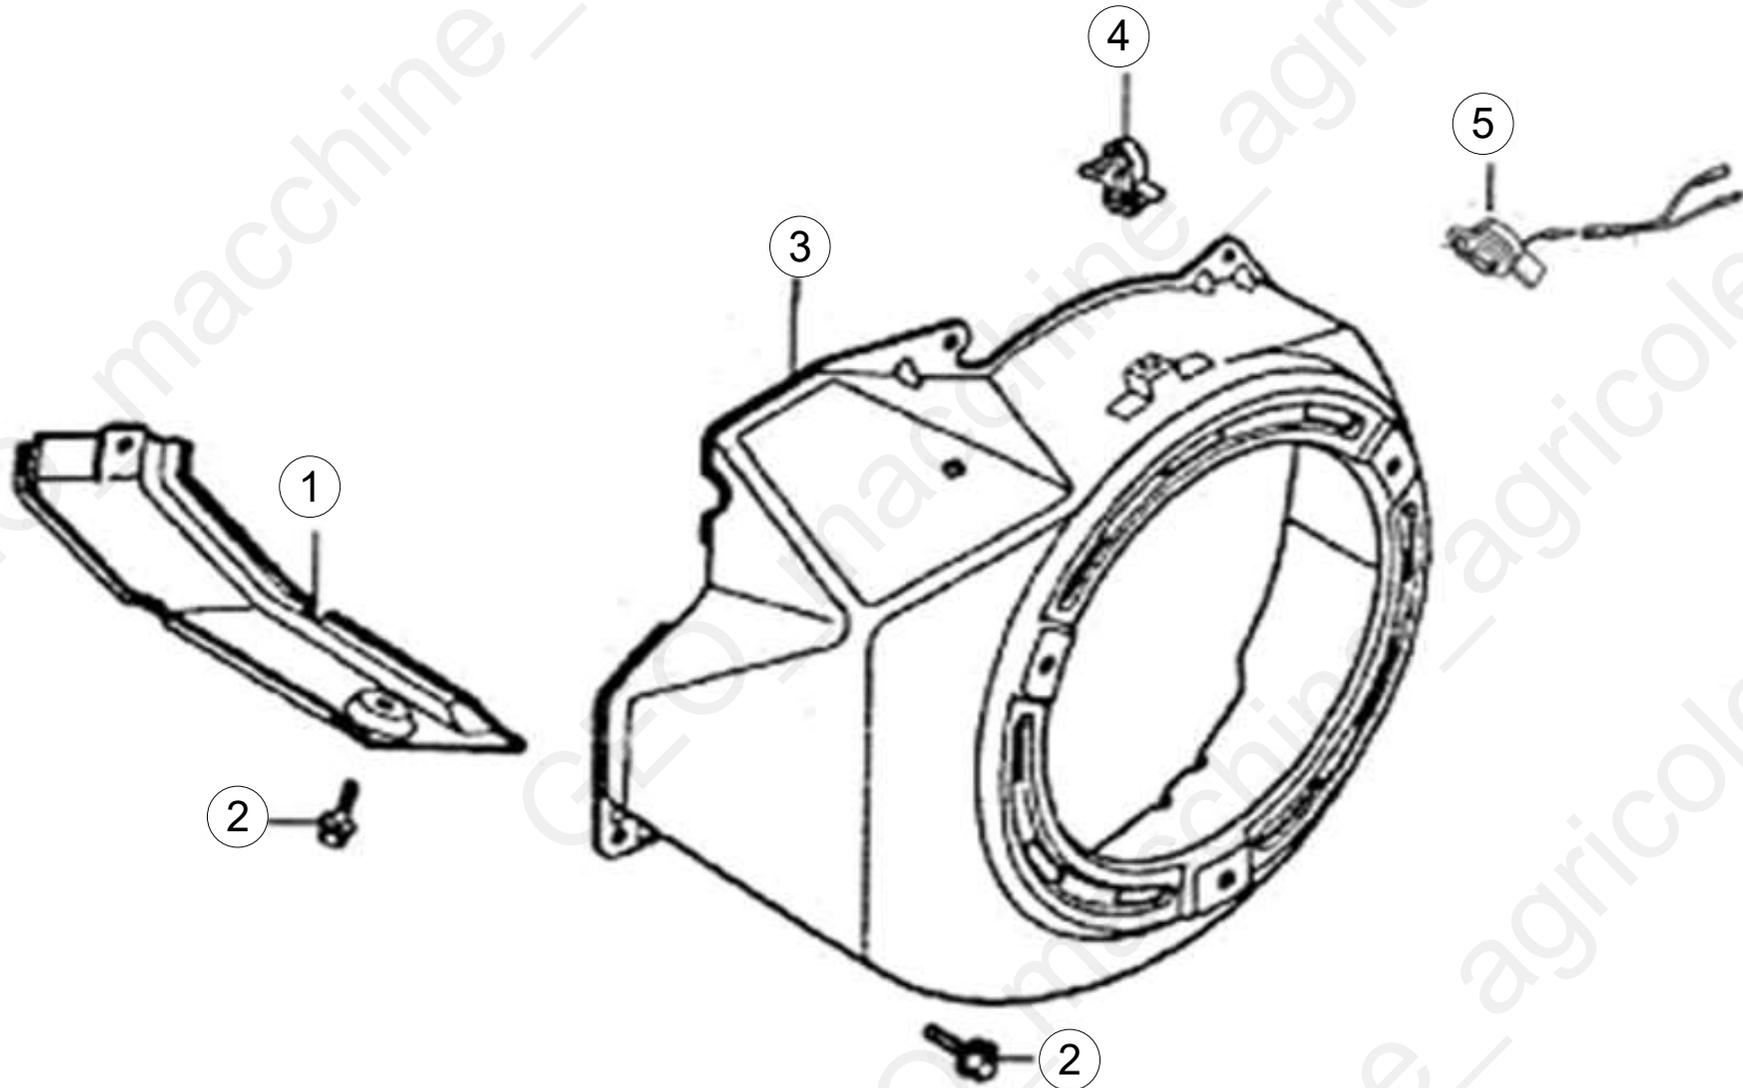


Machine: MOTORE JF270-290

Assembly: Part8



Pos	Code	Description	NOTE	Q.
1	JF270-H-01	SHROUD		1
2	JF270-H-02	FLANGE BOLT (M6×14)		6
3	JF270-H-03	FAN COVER COMP.		1
4	JF270-H-04	CORD CLAMPER		1
5	JF270-H-05	ENGINE STOP SWITCH ASSY.		1

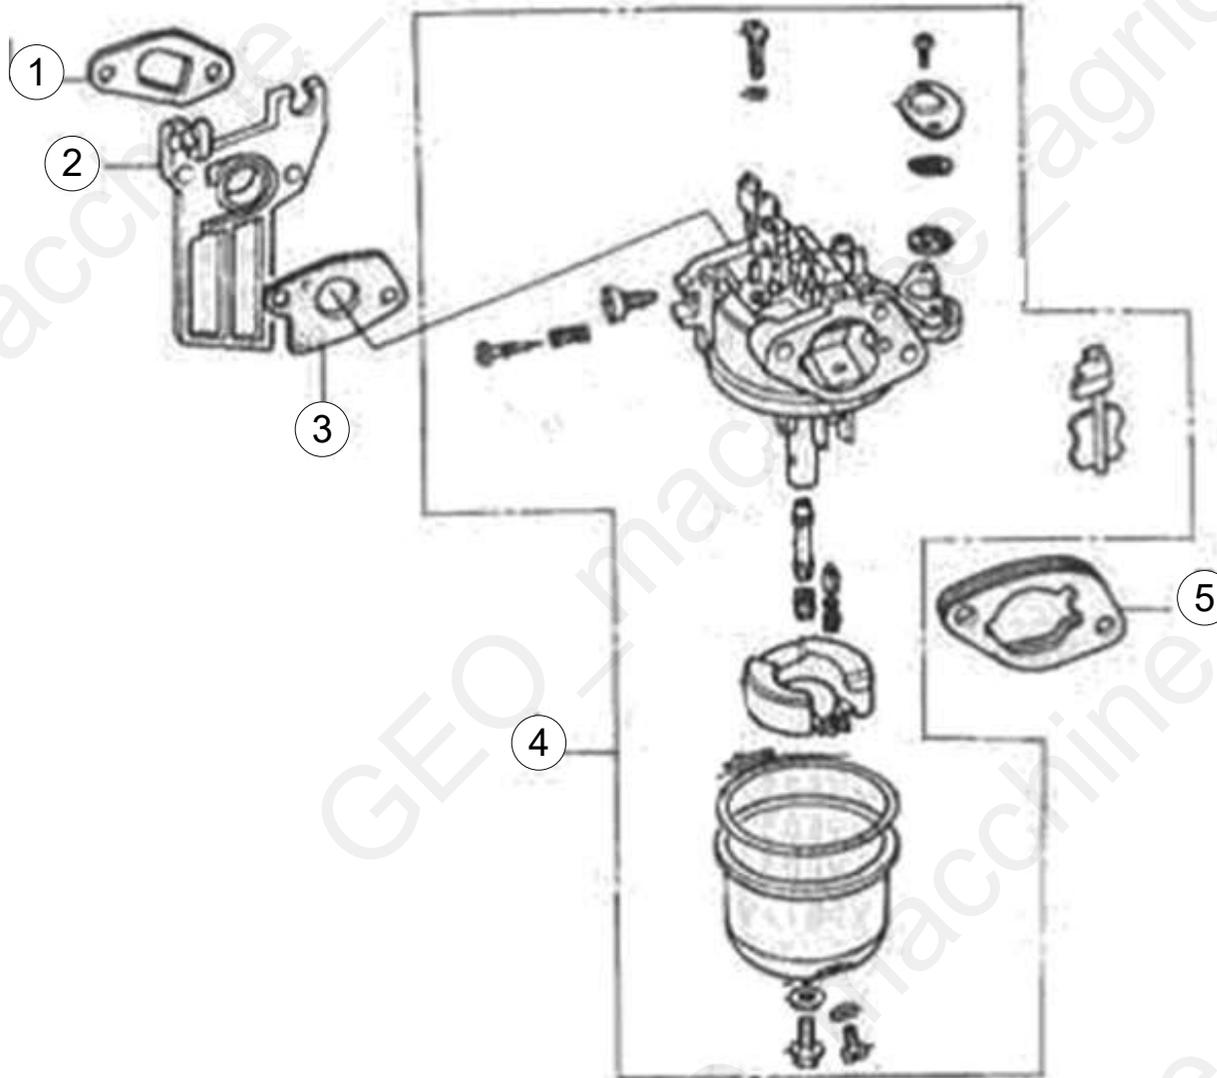


Machine: MOTORE JF270-290


Assembly: Part9




Pos	Code	Description	NOTE	Q.
1	JF270-I-01	INTAKE PIPE GASKET		1
2	JF270-I-02	CARBURETOR INSULATING PLATE		1
3	JF270-I-03	CARBURETOR PAPER GASKET		1
4	JF270-I-04A	CARBURETOR ASSEMBLY		1
5	JF270-I-05	CARBURETOR IRON GASKET		1

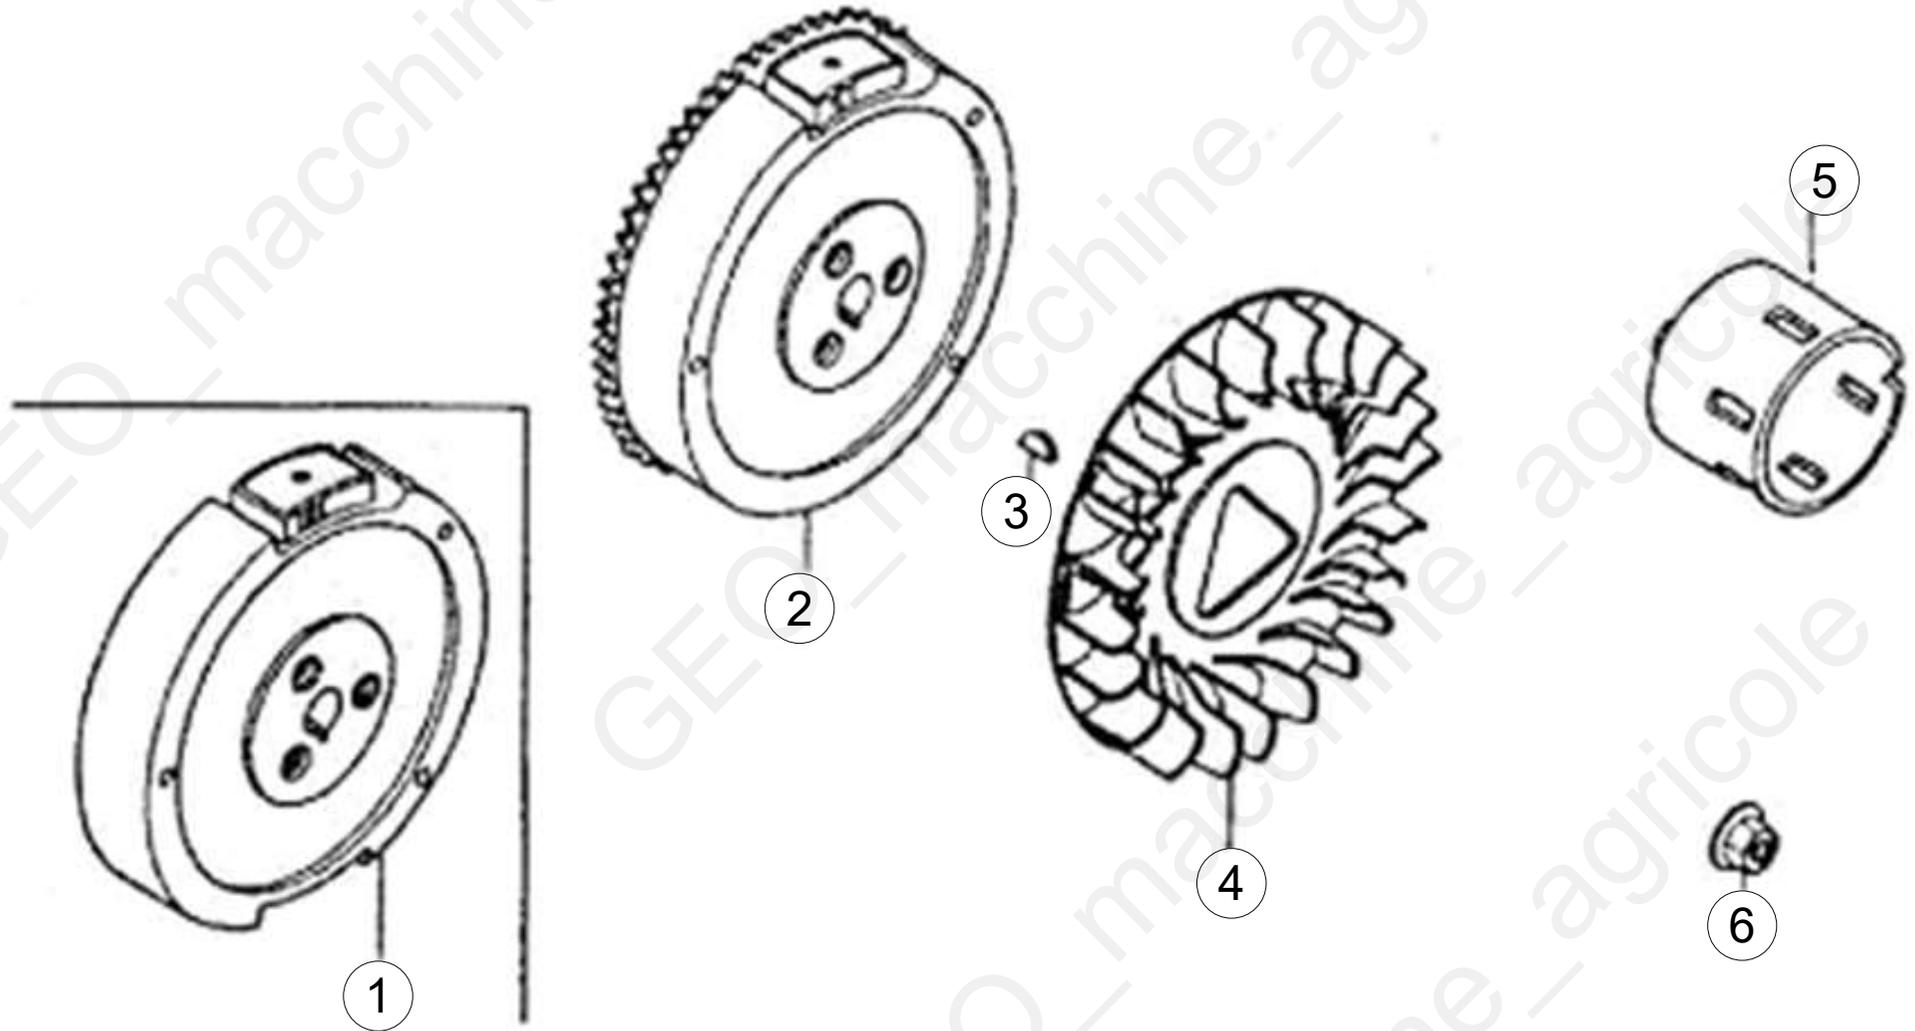

Pos	Code	Description	NOTE	Q.
1	JF270-J-01A	FLYWHEEL		1
2	JF270-J-01B	FLYWHEEL		1
3	JF270-J-02	SPECIAL WOODRUFF KEY		1
4	JF270-J-03	COOLING FAN		1
5	JF270-J-04	STARTER PULLEY		1
6	JF270-J-05	FLYWHEEL NUT (M16)		1

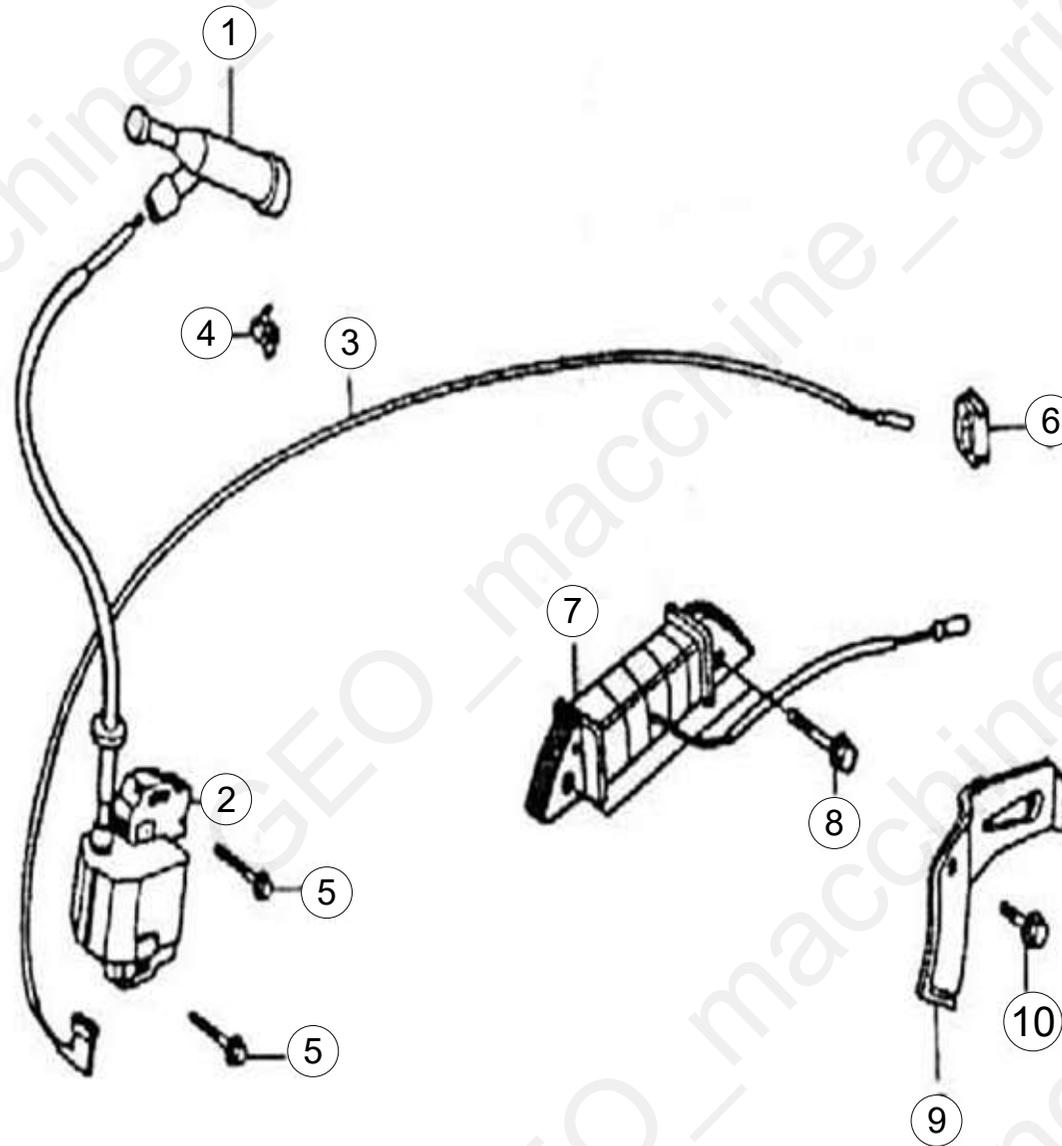

Pos	Code	Description	NOTE	Q.
1	JF270-K-01	PLENUM CAP		1
2	JF270-K-02	IGNITION GOIL ASSY.		1
3	JF270-K-03	STOP SWITCH CORD		1
4	JF270-K-04	STOP SWITCH CORD HOLDER		1
5	JF270-K-05	FLANGE BOLT (M6×25)		1
6	JF270-K-06	CORD GROMMET		1
7	JF270-K-07	CHARGE COIL ASSY.		1
8	JF270-K-08	FLANGE BOLT (M6×40)		1
9	JF270-K-09	CORD CLAMPER		1
10	JF270-K-10	FLANGE BOLT (M6×20)		1

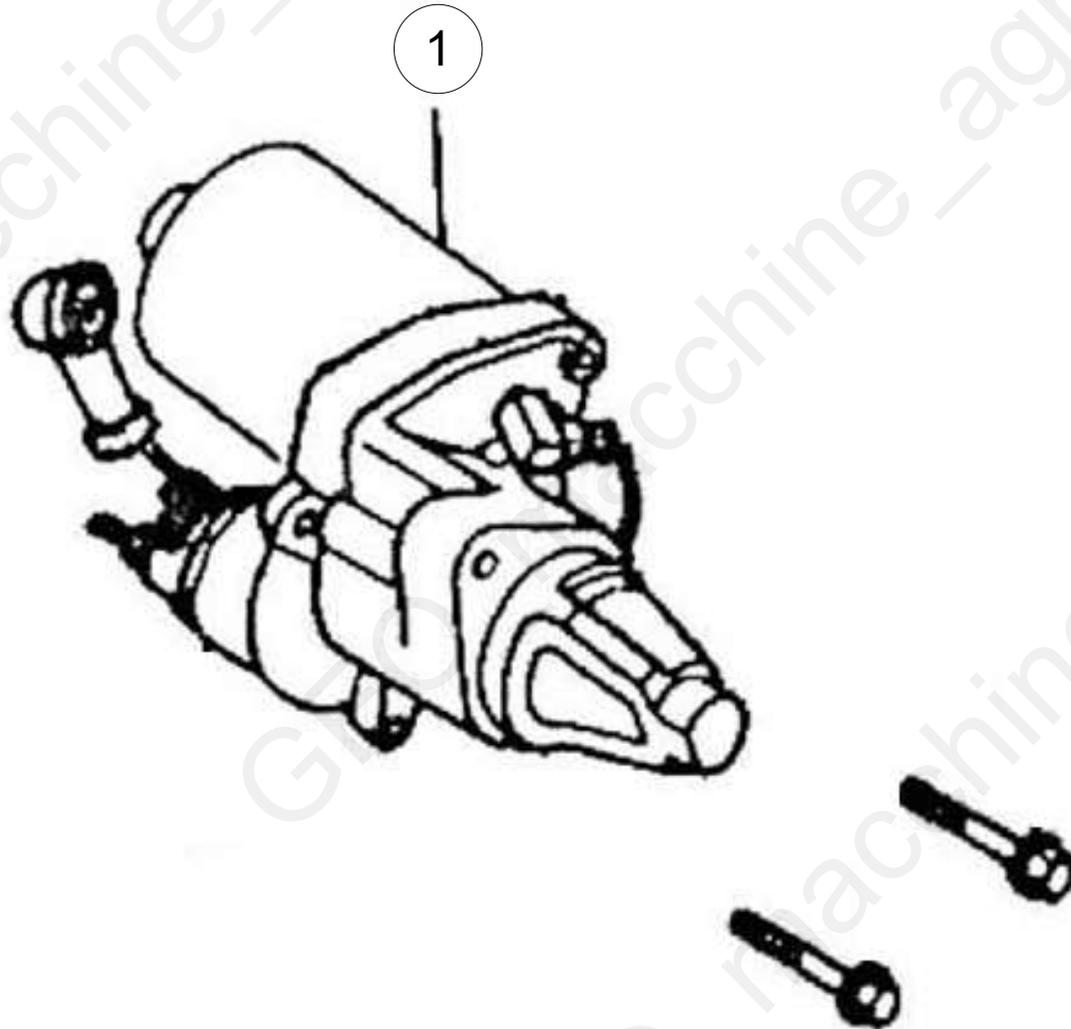


Machine: MOTORE JF270-290


Assembly: Part12




Pos	Code	Description	NOTE	Q.
1	JF270-L-01	UNIT STARTER MOTOR		1

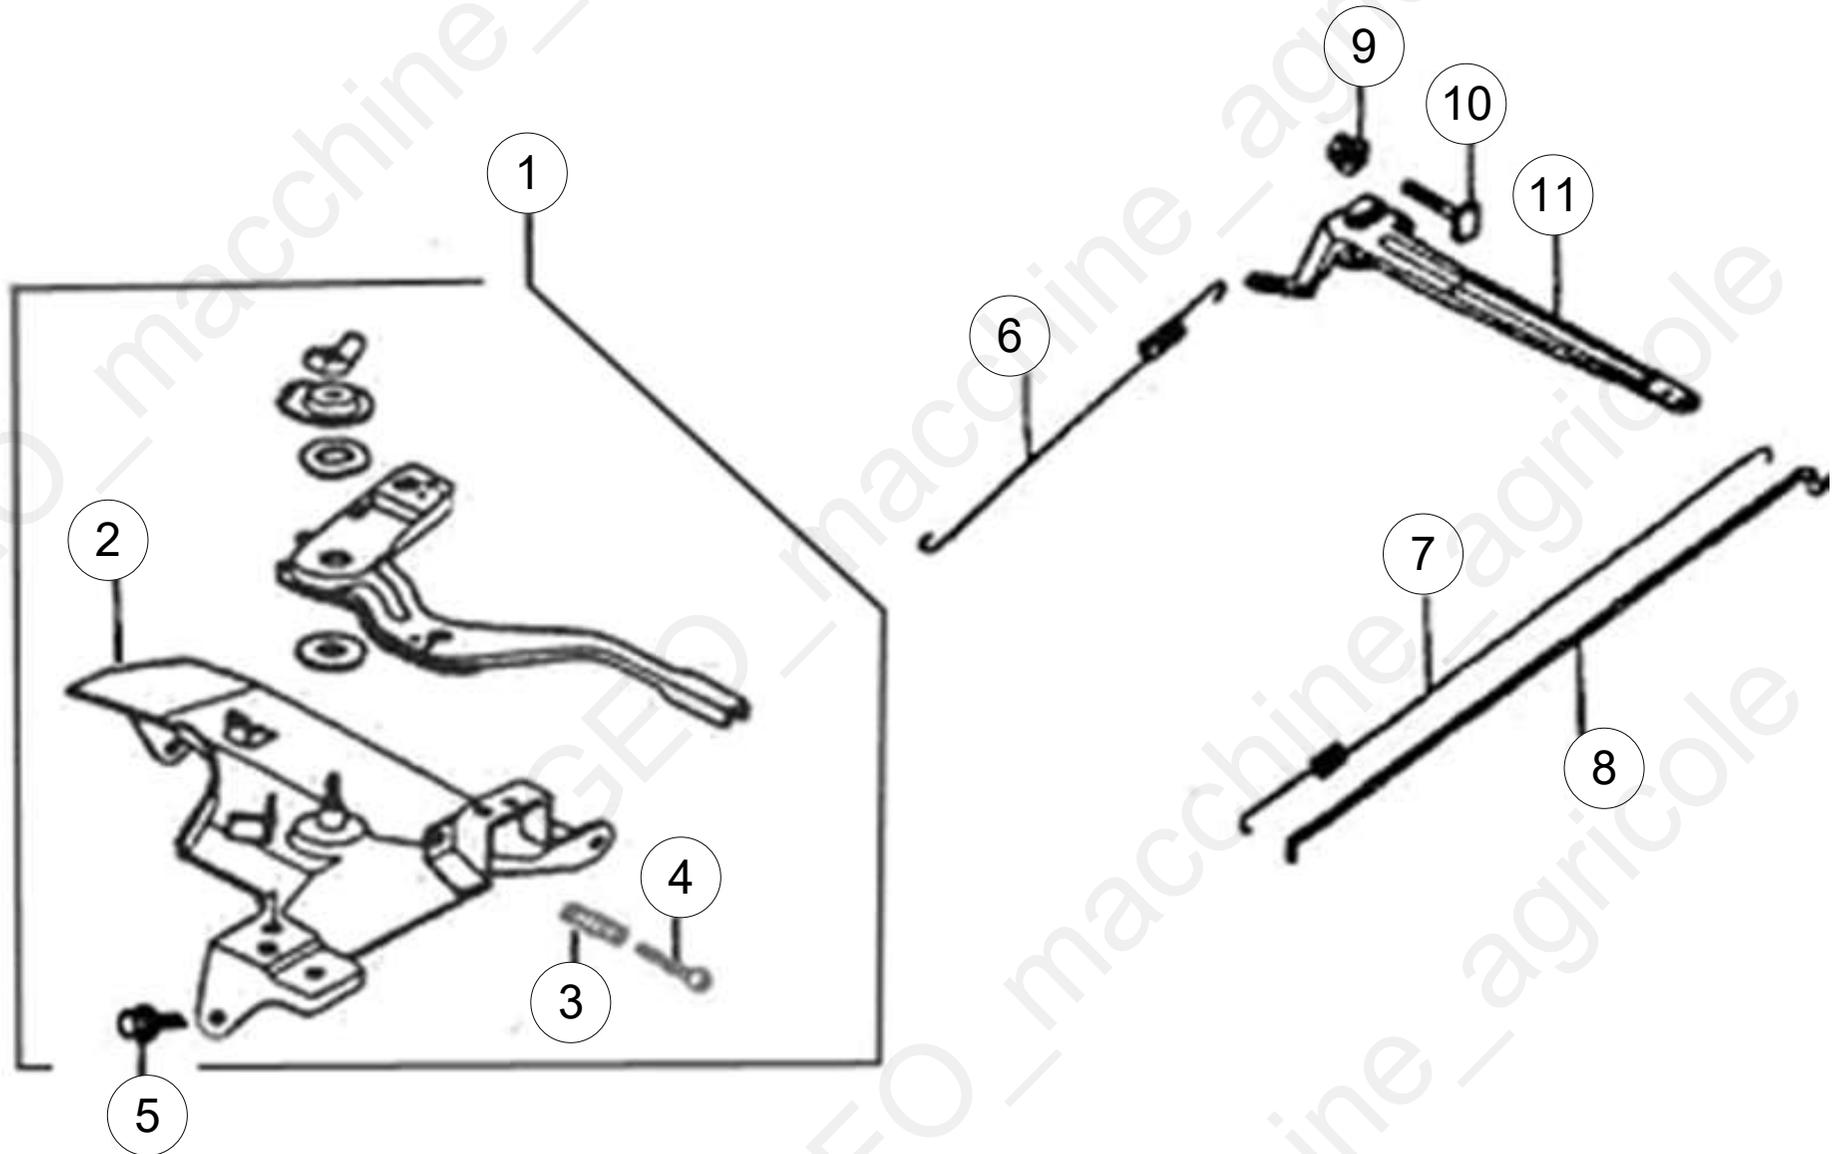


Pos	Code	Description	NOTE	Q.
1	JF270-M-01A	CONTROL ASSY.		1
2	JF270-M-02A	CONTROL BASE COMP.		1
3	JF270-M-03	CONTROL ADJUSTING SPRING		1
4	JF270-M-04	CROSS POND SCREW (M5×34)		1
5	JF270-M-05	FLANGE BOLT (M6×14)		1
6	JF270-M-06	GOVERNOR SPRING		1
7	JF270-M-07	THROTTLE RETURN SPRING		1
8	JF270-M-08	GOVERNOR ROD		1
9	JF270-M-09	FLANGE NUT (M6)		1
10	JF270-M-10	GOVERNOR ARM BOLT (M6)		1
11	JF270-M-11	CONTROL ARM		1

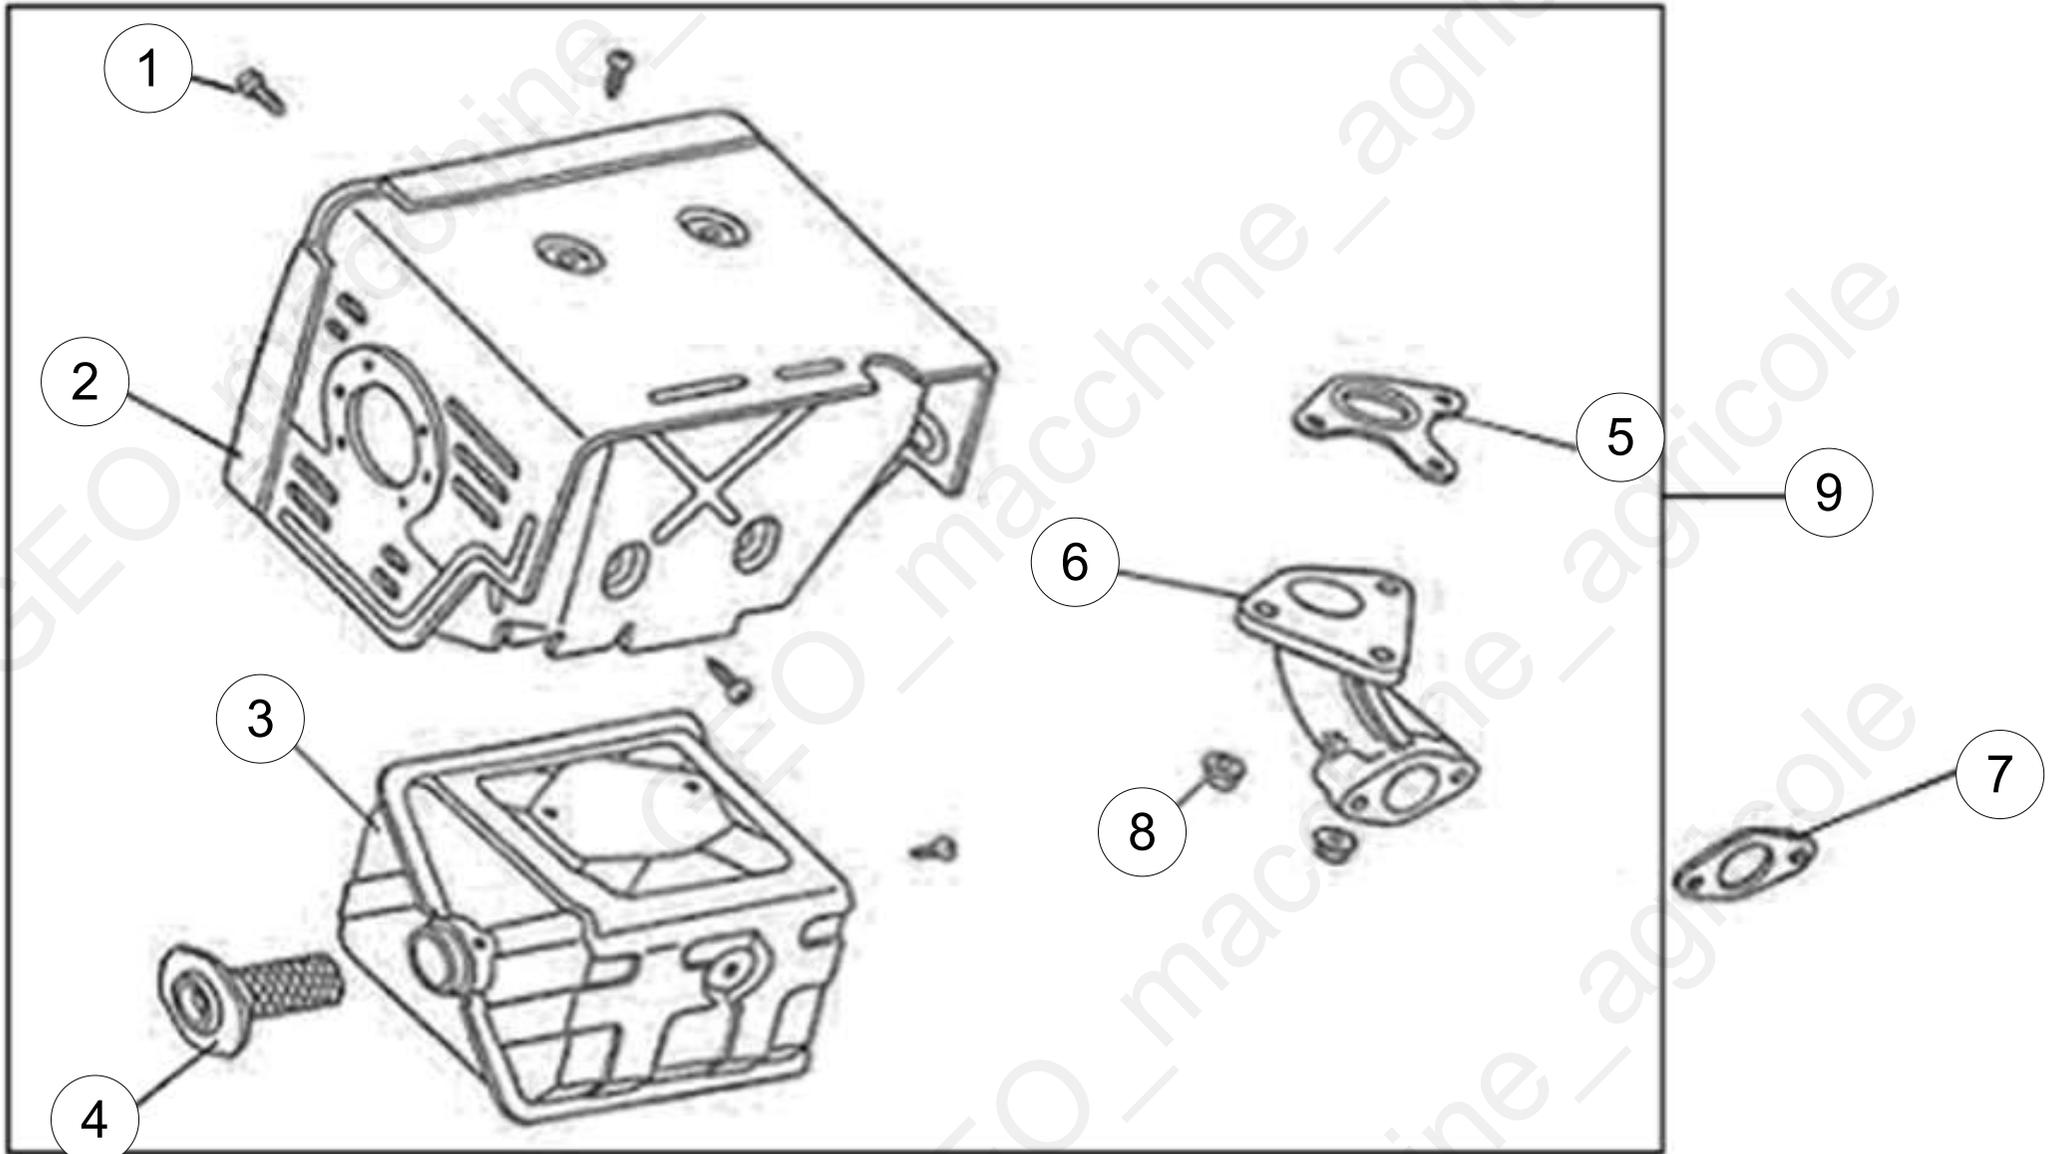


Pos	Code	Description	NOTE	Q.
1	JF270-N-01	TAPPING SCREW (M5×8)		4
2	JF270-N-02	MUFFLER PROTECTOR COMP.		1
3	JF270-N-03	MUFFLER COMP.		1
4	JF270-N-04	SPARK ARRESTER?SILENT?		1
5	JF270-N-05	EX. PIPE GASKET		1
6	JF270-N-06	EX. PIPE COMP.		1
7	JF270-N-07	MUFFLER GASKET		1
8	JF270-N-08	FLANGE NUT (M8)		2
9	JF240-N-09	MUFFLER ASSY.		1

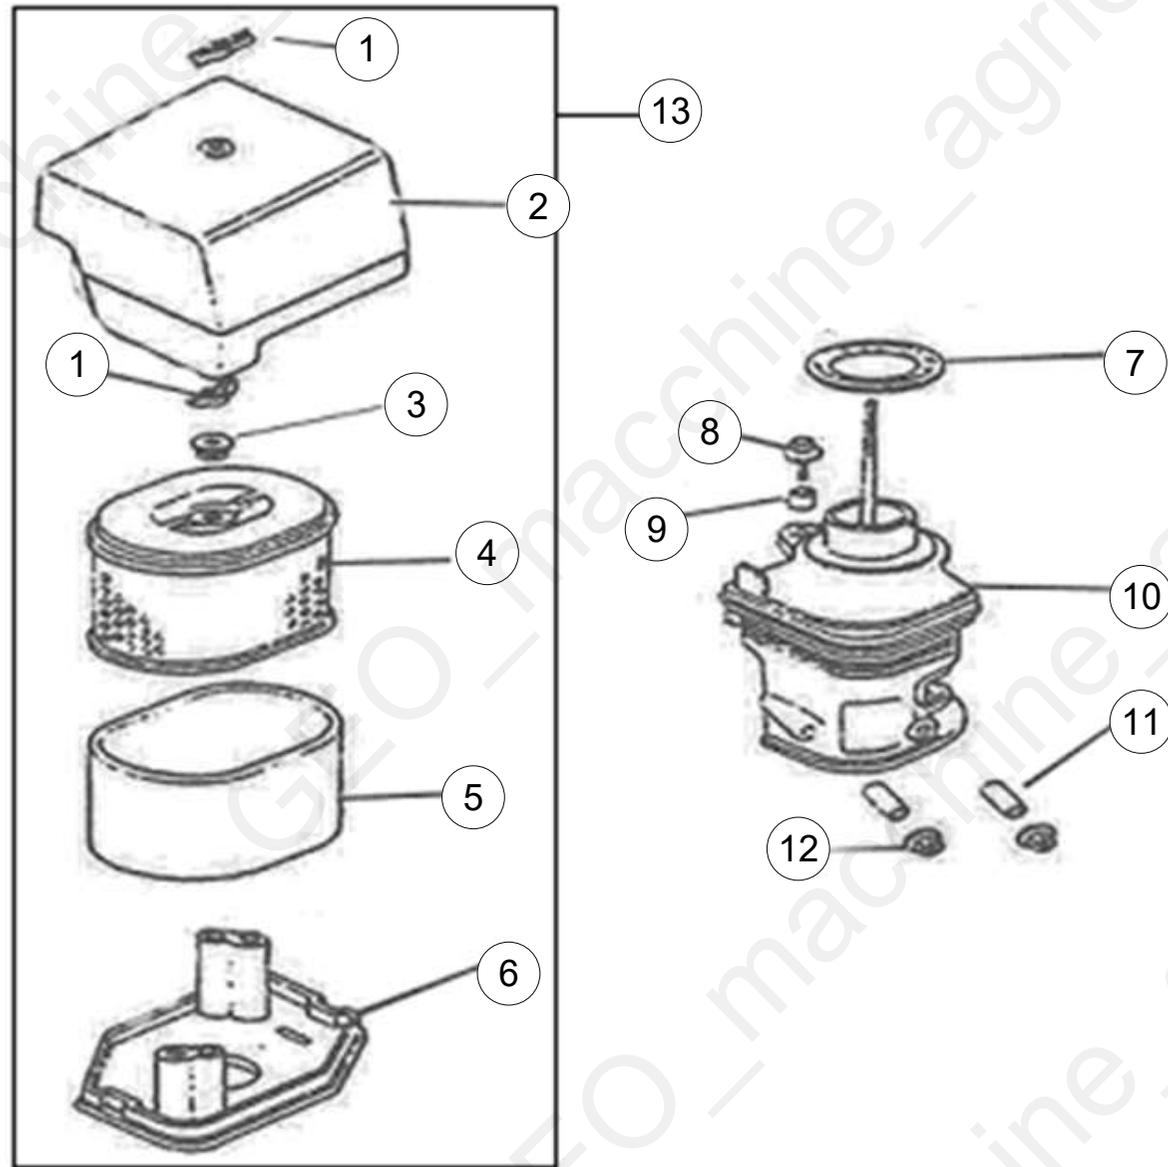

Pos	Code	Description	NOTE	Q.
1	JF270-O-01	AIR CLEANER COVER NUT		2
2	JF270-O-02	AIR CLEANER COVER		1
3	JF270-O-03	AIR CLEANER GROMMER		1
4	JF270-O-04	AIR CLEANER ELEMENT		1
5	JF270-O-05	OUTER FILTER		1
6	JF270-O-06	SILENCER NOSE		1
7	JF270-O-07	ELBOW PACKING		1
8	JF270-O-08	FLANGE BOLT (M6×20)		1
9	JF270-O-09	AIR CLEANER COLLAR		1
10	JF270-O-10	AIR CLEANER ELBOW COMP.		1
11	JF270-O-11	AIR CLEANER COLLAR		1
12	JF270-O-12	FLANGE NUT (M8)		2
13	JF270-O-13	AIR CLEANER ASSEMBLY		1

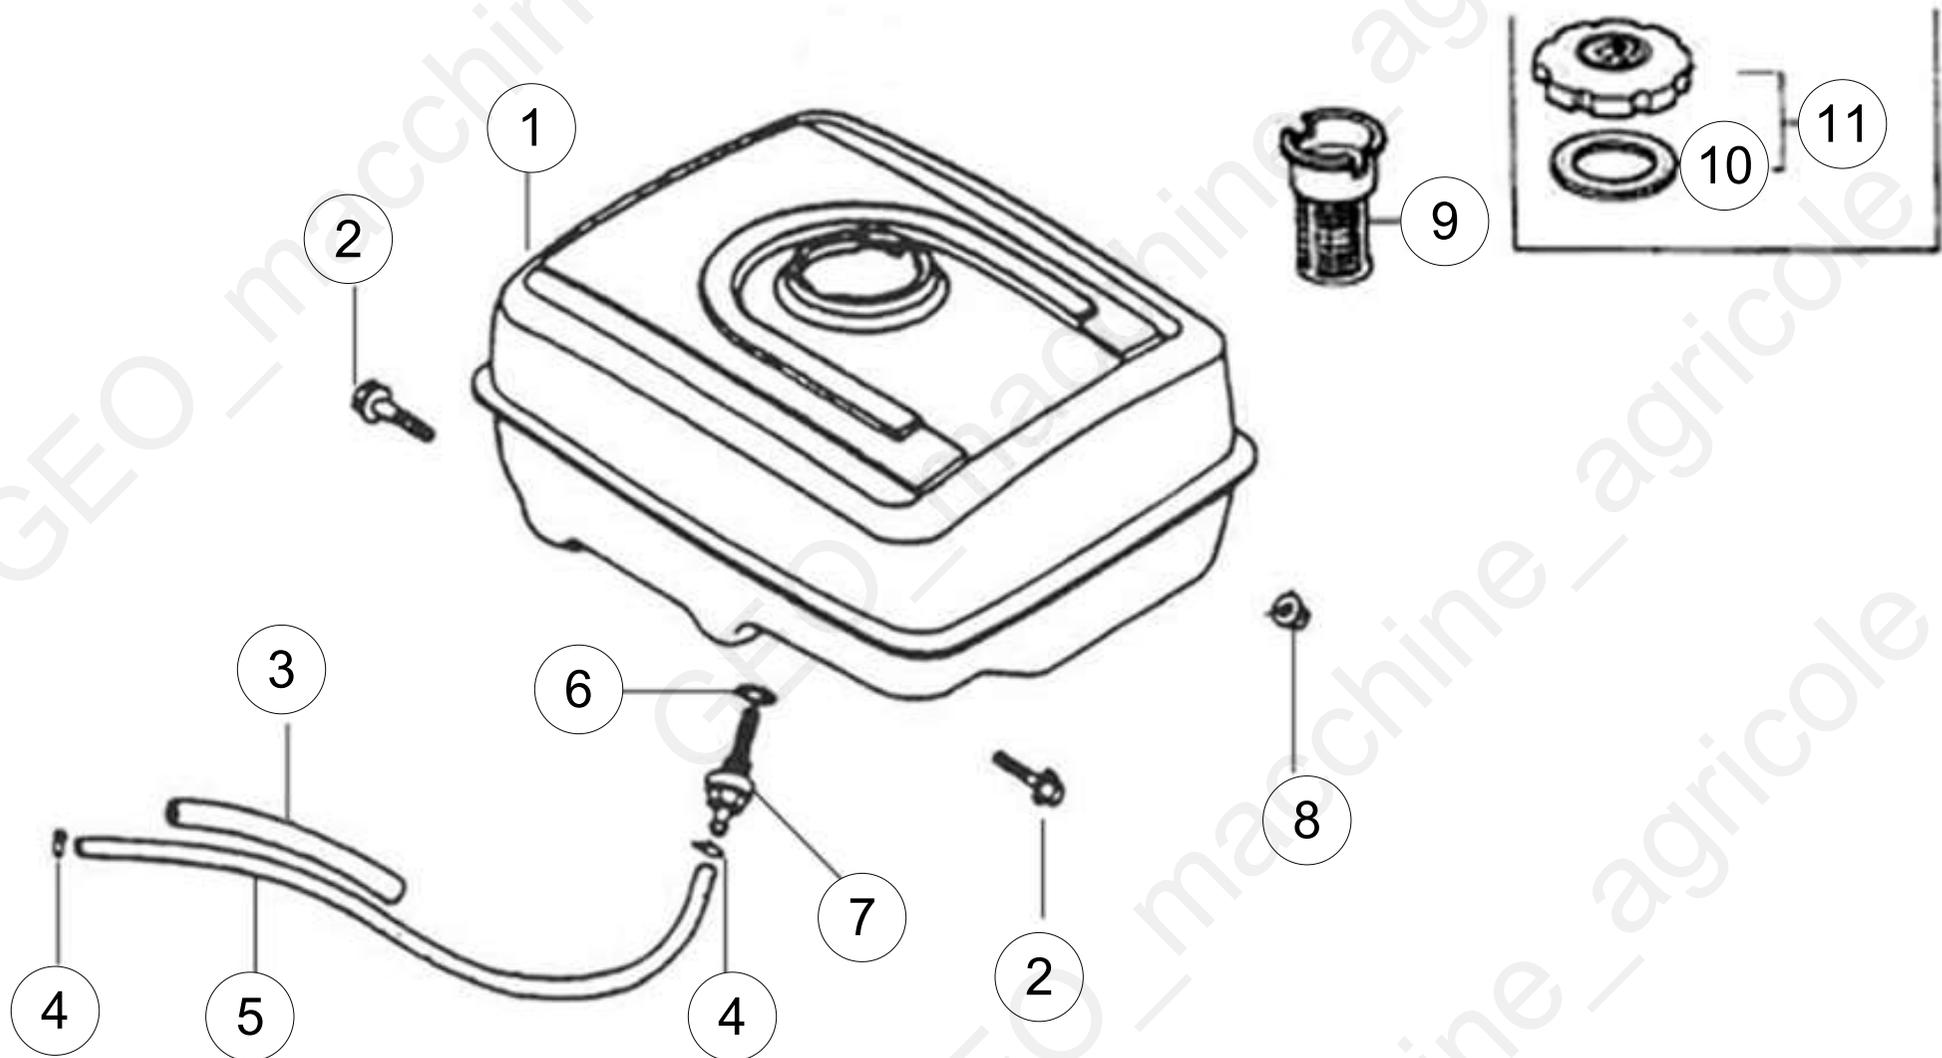

Pos	Code	Description	NOTE	Q.
1	JF270-P-01	FUEL TANK ASSY.		1
2	JF270-P-02	FLANGE BOLT (M8×25)		1
3	JF270-P-03	SUPPORTER RUBBER		1
4	JF270-P-04	TUBE CLIP		2
5	JF270-P-05	FUEL TUBE		1
6	JF270-P-06	O-RING (14mm)		1
7	JF270-P-07	FUEL TANK JOINT		1
8	JF270-P-08	FLANGE NUT (M6)		1
9	JF270-P-09	FUEL FILTER		1
10	JF168-N-11	FUEL FILLER CAP PACKING		1
11	JF270-P-10	FUEL FILLER CAP COMP.		1

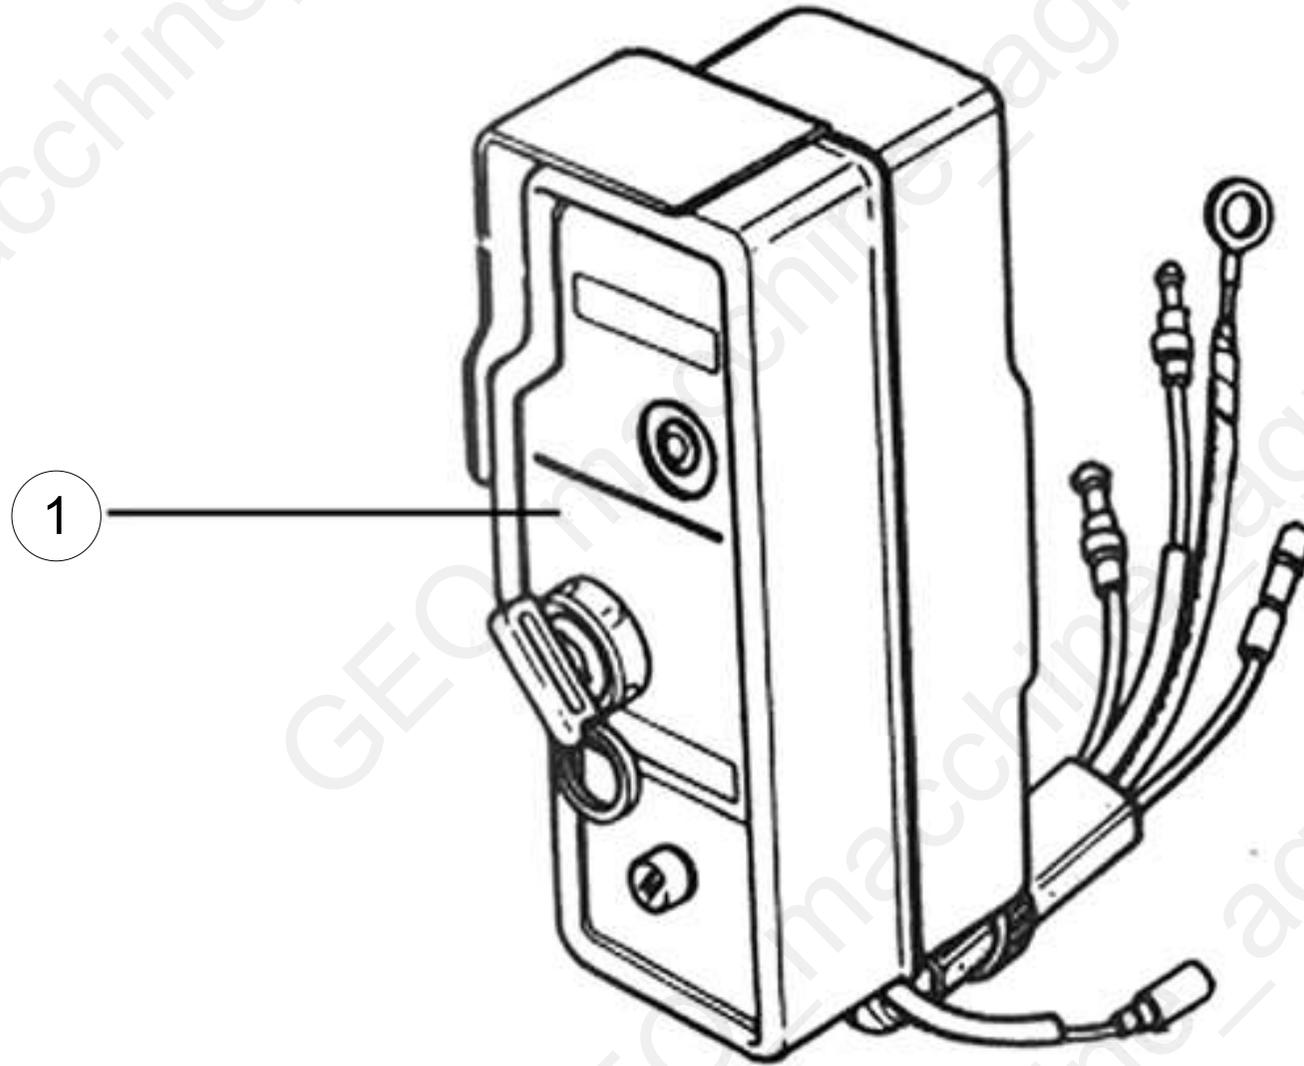

Machine: MOTORE JF270-290

Assembly: Part17



Pos	Code	Description	NOTE	Q.
1	JF390-Q-01	CONTROL BOX ASSY.		1