

Macchina


ATVSprayer



Sezione

1

ATVSprayer50

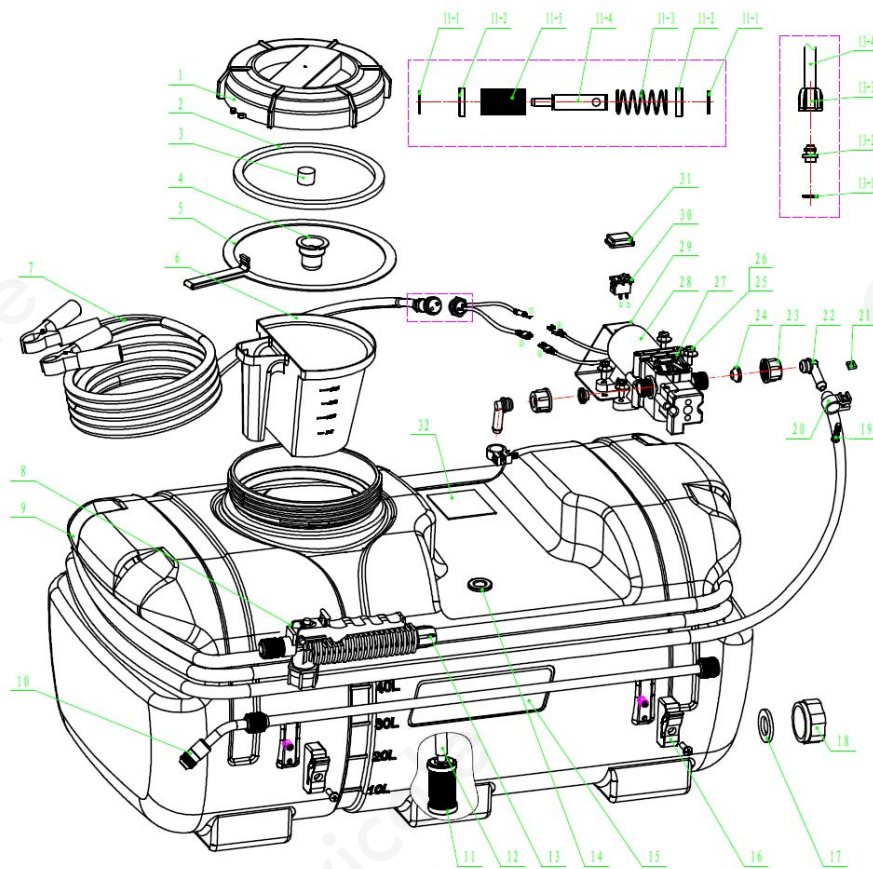


SerNo	PartNo	Description	Quantity
1	ATV10.01-01		1
2	TF900PP.01-02		1
3	TF900PP.01-03		1
4	TF900PP.01-04		1
5	ATV10-06		1
6	ATV10-05		1
7	ATV15.04		1
8	MC-24		1
9	ATV15.01		1

10	SL-116	1
11	ATV15.02	1
12	ATV15-02	1
13	ATV15.03	1
14	ATV25-03	1
15		2
16	ATV10-07	2
17	TF900PP.01-07	1
18	TF900PP.01-08	1
19	GB/T818-2000	2
20	NS15-11	2
21	GB/T39-1988	2
22	ATV5.02-01	2
23	NS16.03-01	2
24	ATV5.02-02	2
25	GB/T95-2002	4
26	FGB/T818-2000	6
27	DMBD2.6L.00	1
28		1
29	ATV15-03	1
30		1
31		1
32		1

Sezione

2

ATVSprayer100

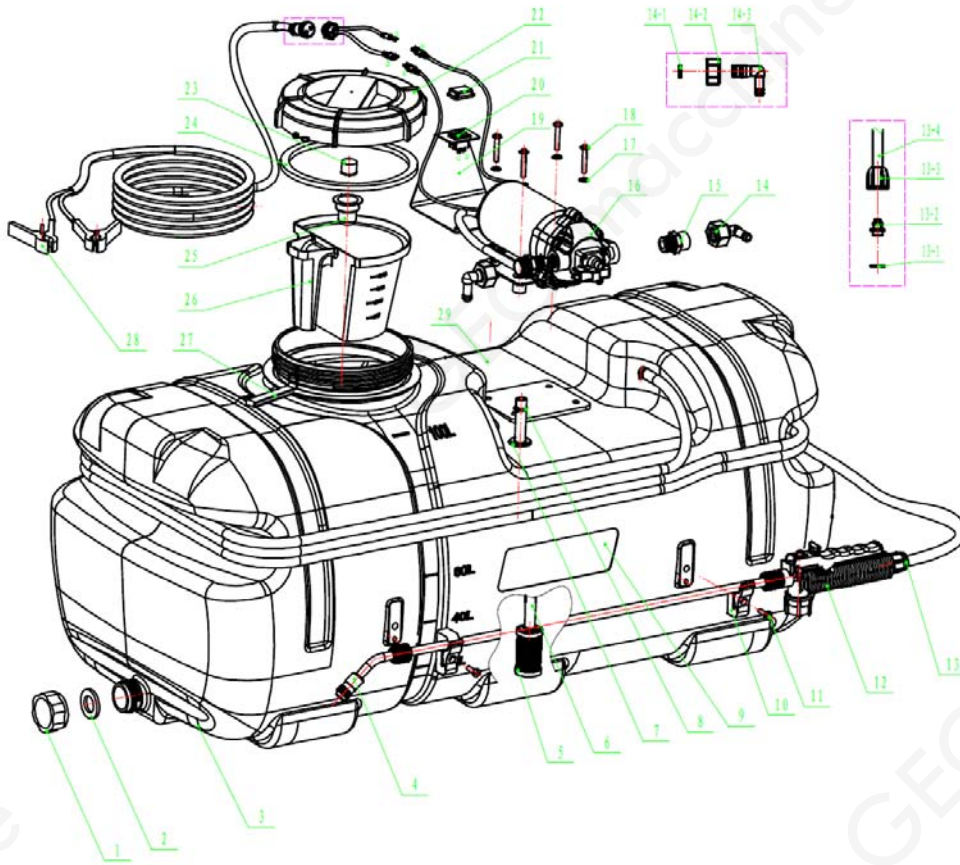

SerNo	PartNo	Description	Quantity
1		TF900PP.01-06	1
2		TF900PP.01-07	1
3		ATV25.01	1
4		SL-116	1
5		ATV15.02	1
6		ATV25-02	1
7		ATV25-03	1
8			2
9			2
10		ATV10-07	2
11		GB/T818-2000	2
12		MC-24	1
13		ATV15.03	1
14		ATV25.02	2
15		ATV25-04	1
16			1
17		GB/T95-2002	4
18		GB/T818-2000	4
19		ATV25-01	1

20		1
21		1
22	ATV10.01-01	1
23	TF900PP.01-03	1
24	TF900PP.01-02	1
25	TF900PP.01-04	1
26	ATV10-05	1
27	ATV10-06	1